



Vogue Range

Balanced Flue Log Effect Stove Range
with Thermostatic Remote Control



User & Installation Instructions

IMPORTANT

THE OUTER CASING, FRONT AND GLASS PANEL BECOME EXTREMELY HOT DURING OPERATION AND WILL RESULT IN SERIOUS INJURY AND BURNS IF TOUCHED. IT IS THEREFORE RECOMMENDED THAT A FIREGUARD COMPLYING WITH BS 8423 (LATEST EDITION) IS USED IN THE PRESENCE OF YOUNG CHILDREN, THE ELDERLY OR INFIRM.

ENSURE THAT ALL COMBUSTIBLE MATERIALS ARE NOT POSITIONED ABOVE OR NEAR TO THE APPLIANCE OUTER CASING.

This product contains a heat resistant glass panel. This panel should be checked during Installation and at each servicing interval. If any damage is observed on the front face of the glass panel (scratches, scores, cracks or other surface defects), the glass panel must be replaced and the appliance must not be used until a replacement is installed. Under no circumstances should the appliance be used if any damage is observed, the glass panel is removed or broken.

It is essential that ALL of the screws that retain the glass frame are replaced and tightened correctly. Under no circumstances should the appliance be operated if any of these screws are loose or missing.

These Instructions must be left with the appliance for future reference and for consultation when servicing the appliance. Please make the customer aware of the correct operation of the appliance before leaving these instructions with them.

The commissioning sheet found on Page 3 of this Instruction manual must be completed by the Installer prior to leaving the premises.

PR2246.12.11.2022

APPLIANCE COMMISSIONING CHECKLIST

To assist us in any guarantee claim please complete the following information:-

IMPORTANT NOTICE

Explain the operation of the appliance to the end user, hand the completed instructions to them for safe keeping, as the information will be required when making any guaranteed claims.

FLUE CHECK	PASS	FAIL
1. Flue Is correct for appliance		
2. Flue flow Test N/A		
3. Spillage Test N/A		
GAS CHECK		
1. Gas soundness & let by test		
2. Standing gas pressure	mb	
3. Appliance working pressure (on High Setting) Minimum Pressure Requirement: NG - 17.5mbar LPG - 34.5mbar NB All other gas appliances must be operating on full	mb	
4. Gas rate	m ³ /h	
5. Does Ventilation meet appliance requirements N/A		
SAFETY CHECK		
1. Check soundness of the Thermocouple connections - including tightness and lead integrity		
2. Glass checked to ensure no damage, scratches, scores or cracks		
3. Glass frame secured correctly and all screws replaced		
BUILDING CONTROL NOTIFICATION		
	YES	NO
1. Installer notified GasSafe/Local Authority of installation via Competent Persons Scheme?		

RETAILER AND INSTALLER INFORMATION

Retailer	Installation Company
.....
.....
Contact No.	Engineer
Date of Purchase	Contact No.
Model No.	GasSafe Reg No.
Serial No.	Date of Installation
Gas Type	

USER INSTRUCTIONS

GENERAL

Installation and servicing must only be carried out by a competent person whose name appears on the GasSafe register. To ensure the engineer is registered with GasSafe they should possess an ID Card carrying the following logo:



In all correspondence, please quote the appliance type and serial number which can be found on the data badge located at the rear of the appliance or on the Commissioning Checklist on Page 3.

Do not place curtains above the appliance:
You must have 300mm clearance between the appliance and any curtains at either side.

The manufacturer considers the full outer casing of this stove to be a working surface and it will become hot whilst in operation. A suitable guard is recommended to protect young children, the aged and the infirm.

No furnishings or other objects should be placed within 1 metre of the front of the appliance.

If a shelf is fitted, a distance of 225mm above the appliance is required.

Do not attempt to burn rubbish in this appliance.

This appliance must only be operated with the door secured firmly in position. If any cracks appear in the glass the appliance must not be used until the glass panel is replaced.

Do not obstruct the flue terminal in any way i.e. by planting flowers, trees shrubs etc. in the near vicinity, or by leaning objects up against the terminal guard.

Do not put any objects on the terminal guard; it will lose its shape.

Do not use a garden sprinkler or hose near the terminal.

This product is guaranteed for 5 years from the date of installation, as set out in the terms and conditions of sale between Gazco and your local Gazco retailer. Please consult with your local Gazco retailer if you have any questions. In all correspondence always quote the Model Number and Serial Number.


OPERATING THE APPLIANCE

The method used to access the control valve differs between models.

VOGUE MIDI MODELS

The control valve is located behind the plinth.

Remove the plinth to access the controls by lifting the hooks clear of the slots on the front of the appliance.

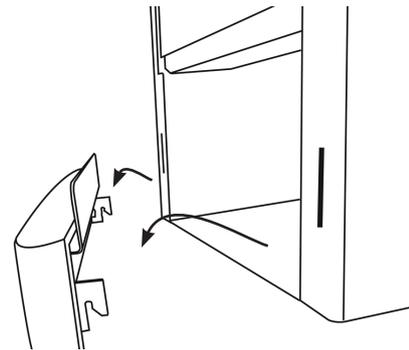

VOGUE MIDI MIDLINE & HIGHLINE MODELS


The control valve is located behind the lower door.

Pull the lower door open from the right hand side to access the controls.

ALL MODELS

The valve has two controls.

1. The right-hand knob controls the pilot ignition.
2. The left-hand knob controls the main burner.

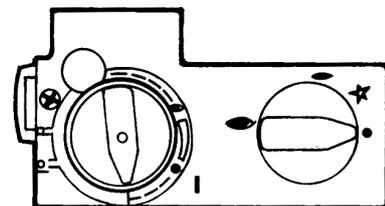

Refer to separate instructions if your appliance is upgraded to include battery remote control. The instructions below apply whether or not you have the remote upgrade.

Lighting the Pilot

To start the left-hand and right-hand control knobs must both point to off (●):

Press in the right-hand control knob and rotate anti-clockwise until a click is heard. Continue to press in. The knob points to the pilot (—).

The pilot is lit.

Keep the knob depressed for 10 seconds before releasing. The pilot remains lit.

Repeat the above steps if the pilot does not stay lit.

NOTE: If the pilot goes out, the Interlock system prevents you lighting again for a short period.

If, after repeating the above steps the pilot does not light, contact your Retailer or Installer.

Turn the right-hand knob to the left to main burner setting (←).

Adjusting the Flame height

You can now adjust the flame height and temperature using the left-hand control knob.

Turn the left-hand knob anti-clockwise to increase the flame height.

Turn clockwise to decrease the height.

IMPORTANT: YELLOW FLAMES TYPICALLY APPEAR WHEN THE APPLIANCE HAS REACHED NORMAL OPERATING TEMPERATURE. THIS CAN TAKE UP TO 30 MINUTES.

WARNING: IF THE APPLIANCE FAILS TO LIGHT OR BECOMES EXTINGUISHED IN USE, WAIT 3 MINUTES BEFORE ATTEMPTING TO RELIGHT.

TURNING OFF THE APPLIANCE

To turn the main burner off turn the left-hand knob until it points to off (●). Just the pilot remains lit.

Press in and turn the right-hand knob until it points to off (●). The pilot goes out.

UPGRADING THE APPLIANCE

The appliance is fitted with a control valve that can easily be upgraded to battery powered remote control.

There are two versions of this control which can be obtained through your local Gazco retailer.

There is no requirement for this upgrade to be carried out by an approved GasSafe engineer. However Gazco recommend that this task is undertaken by a suitably competent person.

This upgrade can be fitted before or after installation but if side clearances are limited then it will be easier to upgrade the appliance before installation. Full instructions are included with the kit.

IMPORTANT: If the appliance is left unattended for long periods of time (e.g. vacation), it is recommended to place the control valve in the Off or Pilot position. Take care when leaving the appliance unattended, in exceptional circumstances sound waves from sources other than the transmitter can cause changes in the flame height adjustment. **DO NOT** install two or more appliances using upgradeable controls in the same room, interference between the remote control frequencies can occur.

STANDARD REMOTE CONTROL (PART NUMBER 8455)

This remote control can control the gas appliance after the pilot has been lit. It can turn the main burner on and regulate it from low through to high and back again.

It can turn the main burner off leaving the pilot burning.

THERMOSTATIC AND TIMER REMOTE CONTROL (PART NUMBER 8456)

This remote control can control the gas appliance after the pilot has been lit.

Manual Mode

Can be used to turn the main burner on and manually regulate it from low through to high and back again. It can also be used to turn the main burner off leaving the pilot burning.

Auto Mode

Will automatically regulate the room to a pre-set temperature.

Timer Mode

Will turn the appliance on and off according to a pre-set programme and automatically regulate the room temperature during the two on periods.

CLEANING THE APPLIANCE

WARNING: THE OUTER PANNELLING OF THE GAZCO VOGUE IS MADE FROM CAST IRON. USE CAUTION WHEN INSTALLING, REMOVING AND STORING AS THE COMPONENTS ARE HEAVY AND SHOULD BE HANDLED CAREFULLY.


Make sure the fire and surrounds are cool before cleaning.

Use:

- A dry cloth to clean the appliance casting.
- A damp cloth for the glass front.


VOGUE MIDI MODELS

Remove the plinth to access the controls by lifting the hooks clear of the slots on the front of the appliance.

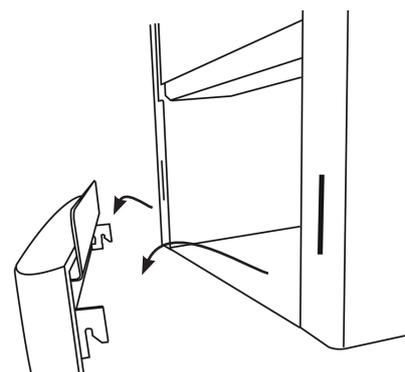


VOGUE MIDI MIDLINE & HIGHLINE MODELS

Pull the lower door open from the right hand side to access the controls.

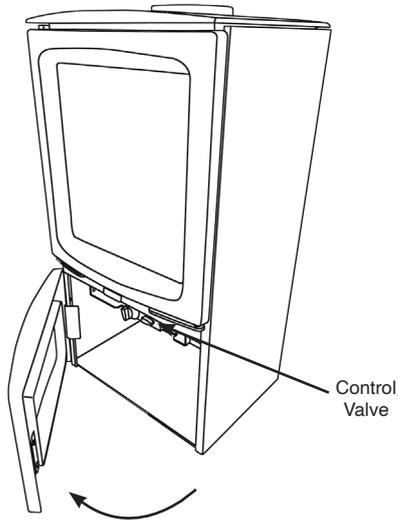


ALL MODELS

Remove the frame to gain access to the viewing aperture by lifting the hooks clear of the slots on the front of the appliance.

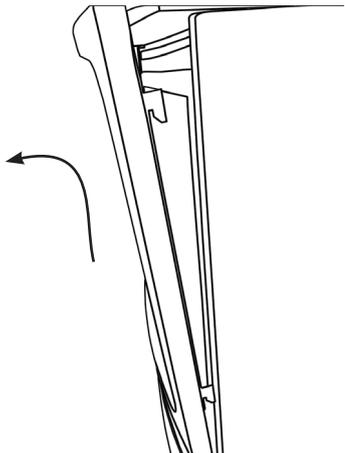


Using a screwdriver remove the 4 screws securing the window panel to the appliance. Take care to support the glass when removing the screws.


VOGUE MIDI & MIDLINE

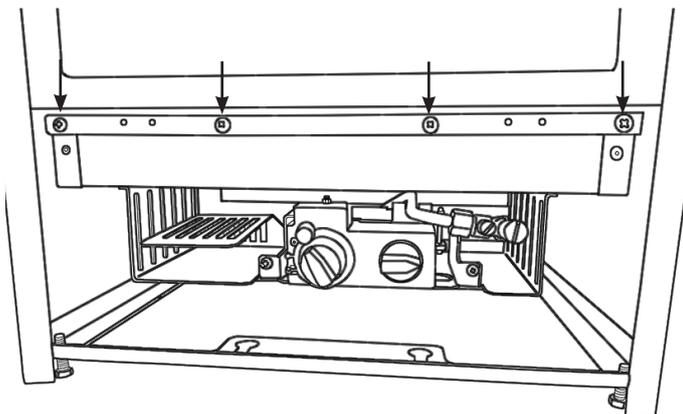

VOGUE MIDI, MIDLINE & HIGHLINE T

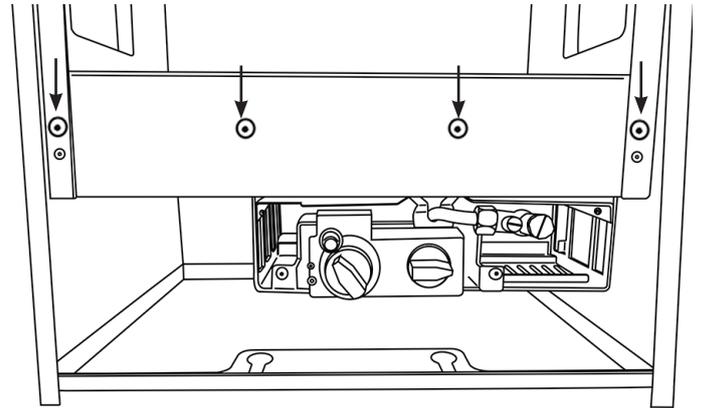

The frame can be removed by lifting the hooks clear of the slots from the bottom of the frame and lifting away from the appliance.

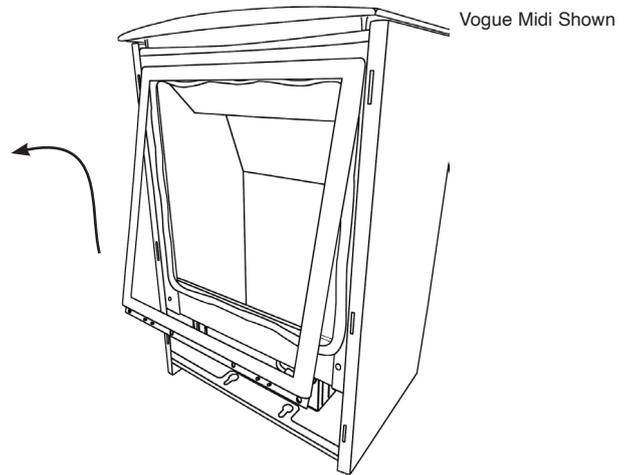

The glass frame must be refitted to the appliance following cleaning or servicing. Hold in position and secure with the screws.





Replace ALL of the securing screws ensuring that a screw is present in all fixing slots.




UNDER NO CIRCUMSTANCES SHOULD THE APPLIANCE BE USED IF ANY OF THE GLASS FRAME RETAINING SCREWS ARE LOOSE OR MISSING.

LOG LAYOUT

LOGS MUST BE POSITIONED ACCORDING TO THE FOLLOWING INSTRUCTIONS TO GIVE THE CORRECT FLAME EFFECT.

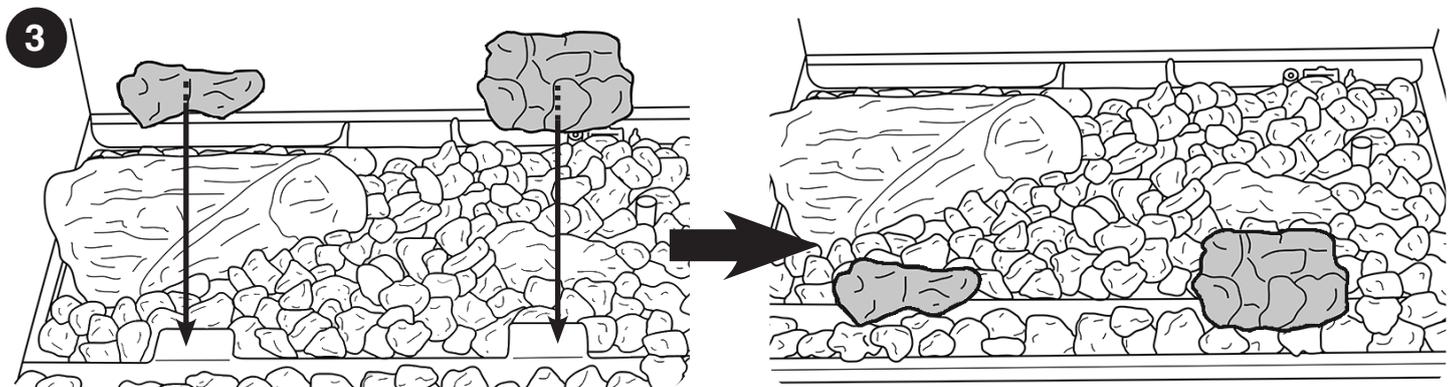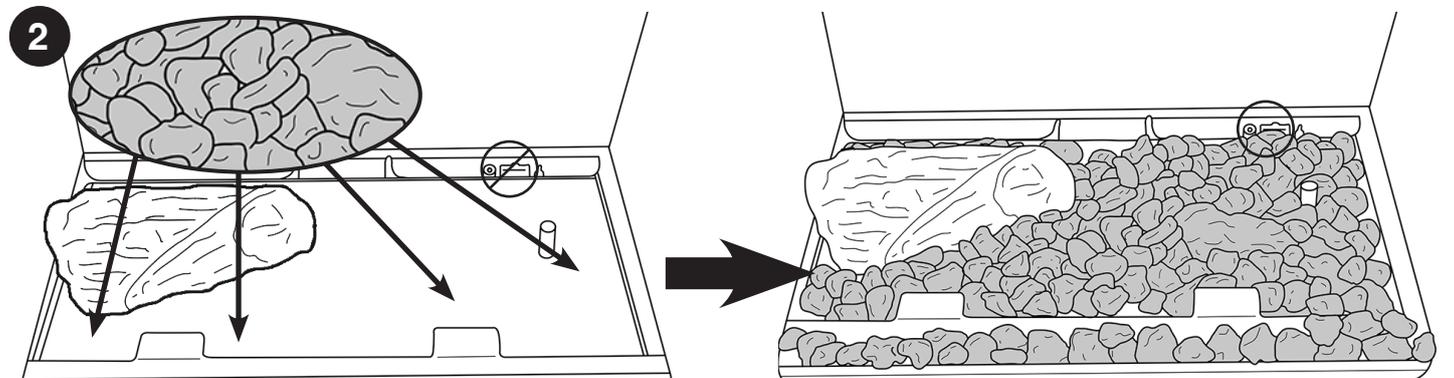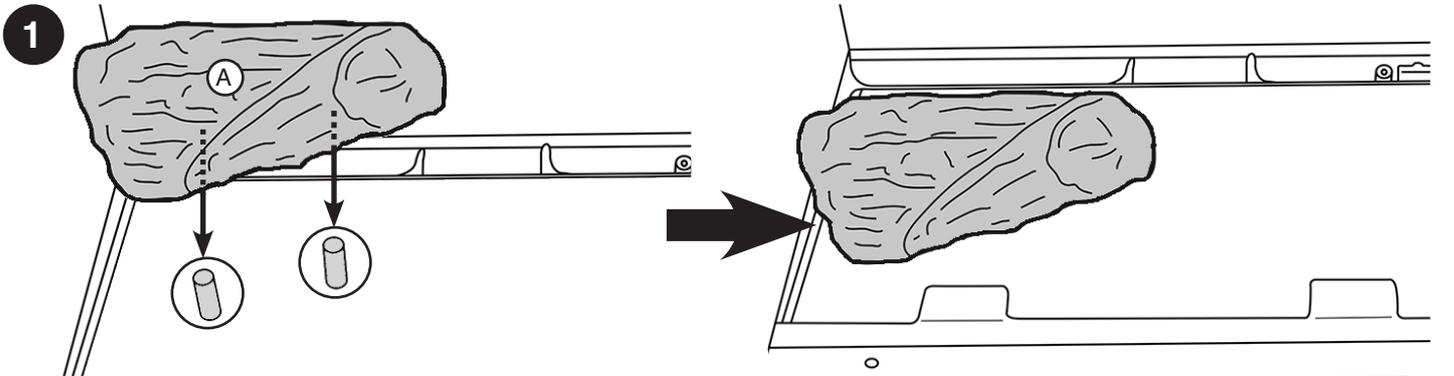
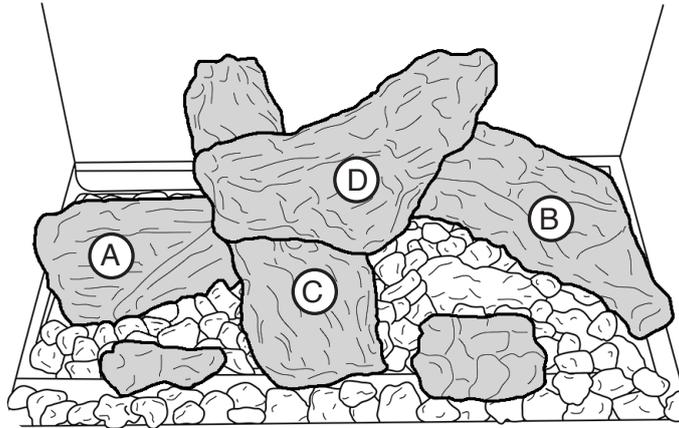


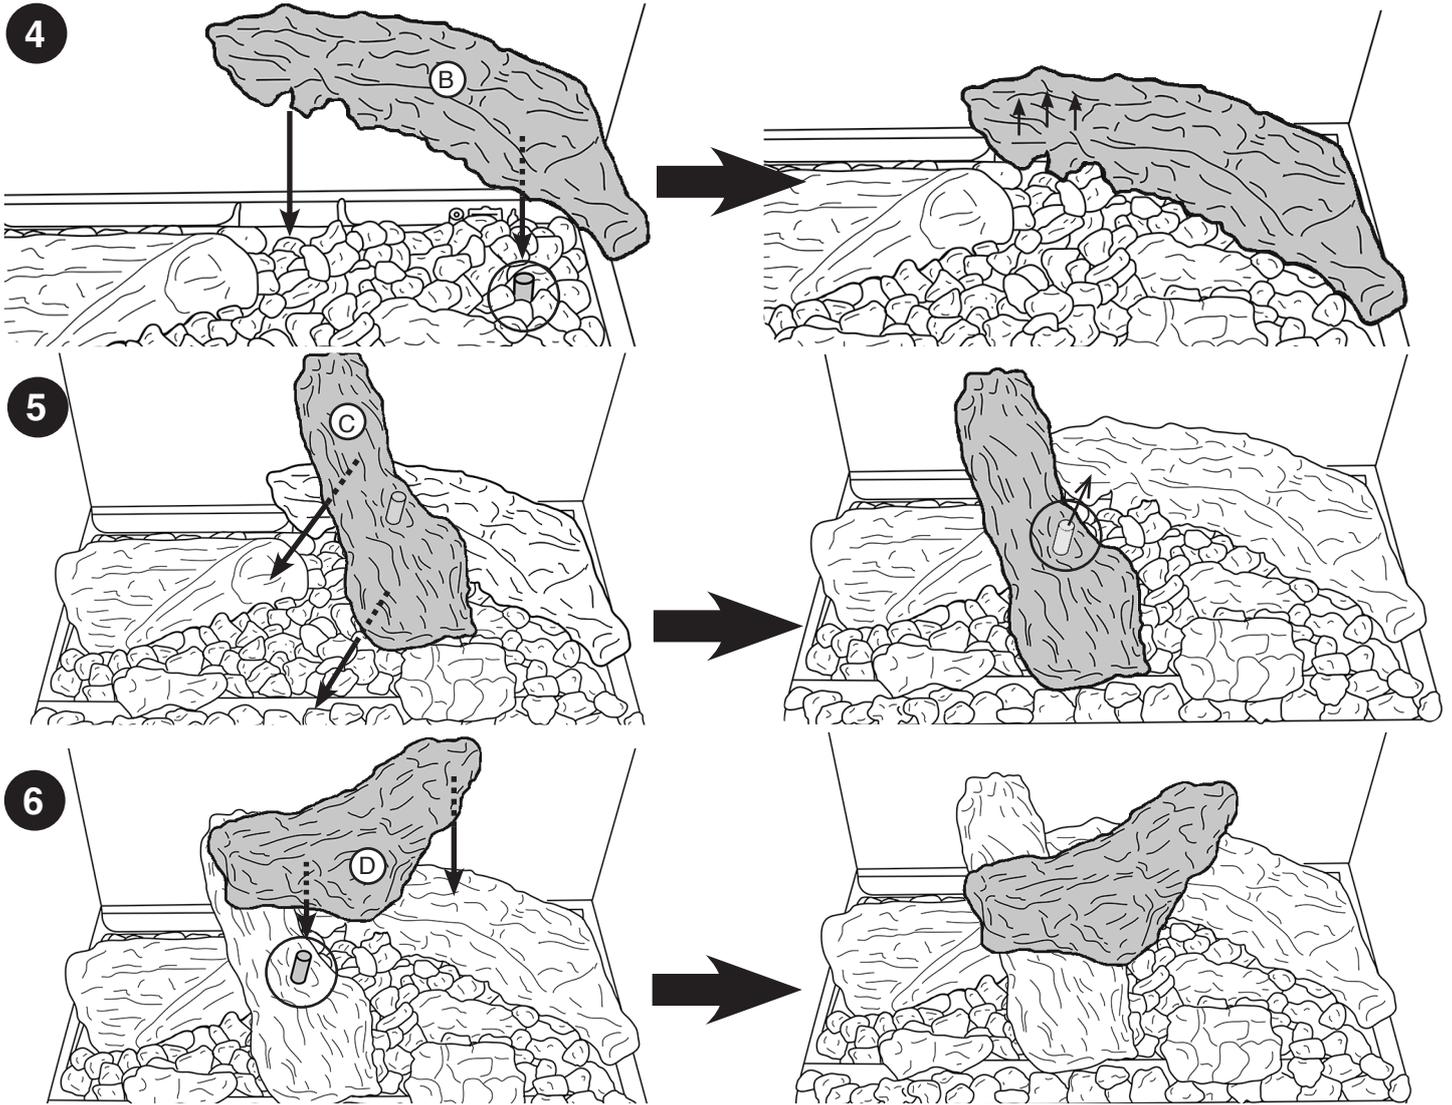

Embaglow

! IT MAY NOT BE NECESSARY TO USE ALL THE EMBAGLOW IN THIS PACK. SPARINGLY SPREAD AN AMOUNT OF THE FIBRES PROVIDED ON THE SECTIONS HIGHLIGHTED IN THE INSTRUCTIONS. Take care not to use more than specified in the instructions.

WARNING:
DO NOT PLACE NEAR THE PILOT AREA.
 Do not place Embaglow in the area around the pilot burner - see highlighted example on diagram as this may effect the ignition process and flame picture.

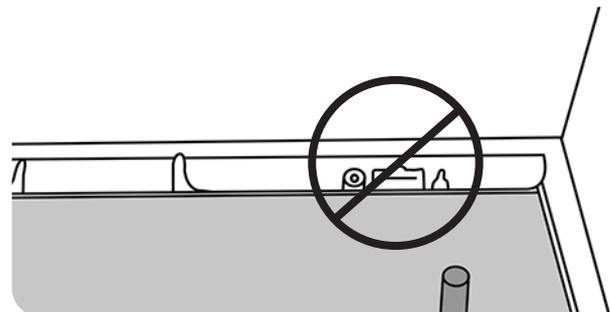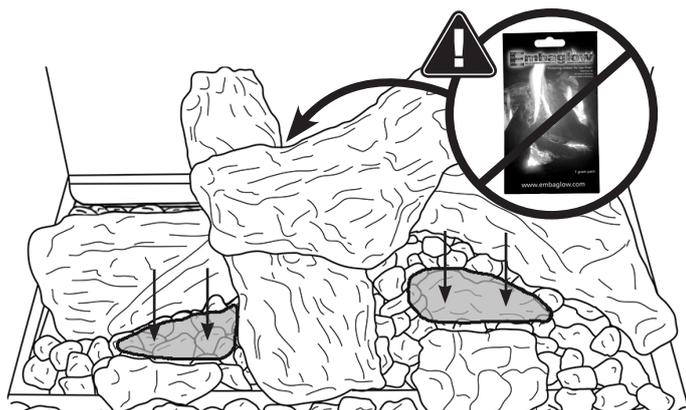

FLAME FAILURE DEVICE

This is a safety feature incorporated on this appliance which automatically switches off the gas supply if the pilot goes out and fails to heat the thermocouple.

IF THIS OCCURS DO NOT ATTEMPT TO RELIGHT THE APPLIANCE FOR 3 MINUTES.

RUNNING IN

During initial use of a new Gazco appliance a strong odour will be encountered as various surface coatings become hot for the first time. Although these odours are harmless it is recommended that the appliance is operated on maximum for 4 to 8 hours in order to fully burn off these coatings. After this period the odours should then disappear.

If the odours persists, please contact your installer for advice.

During the first few hours of burning there may be discolouration of the flames. This will also disappear after a short period of use.

SERVICING

The appliance must be serviced every 12 months by a qualified GasSafe Engineer. In all correspondence always quote the Model number and the Serial number which may be found on the Commissioning Checklist (Page 3).

VENTILATION

This appliance requires no additional ventilation.

INSTALLATION DETAILS

Your installer should have completed the commissioning sheet at the front of this book. This records the essential installation details of the appliance. In all correspondence always quote the Model number and Serial number.

HOT SURFACES

Parts of this appliance become hot during normal use.

Regard all parts of the appliance as a 'working surface', except for the access to the controls.

Provide a suitable fire guard to protect young children and the infirm.

INSTALLATION INSTRUCTIONS

APPLIANCE LOCATION

This appliance has been designed to stand on either a hearth or an optional bench:


CODE	BENCH	WIDTH
RVACLB100B	Riva Bench Low	1000mm
RVACB100B	Riva Bench	1000mm
RVACLB120B	Riva Bench Low	1200mm
RVACB120B	Riva Bench	1200mm
RVACLB140B	Riva Bench Low	1400mm
RVACB140B	Riva Bench	1400mm

To Install the Bench:

Follow Installation - All Models in Installation guide PM205 supplied with the bench kit.

To secure the appliance to the bench:

You must consider where you place the appliance on the bench before drilling the bench.

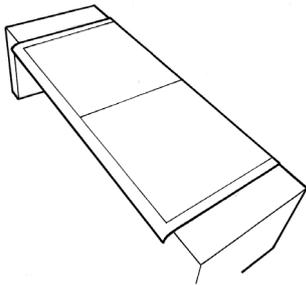

Once the position of the appliance has been decided:
Follow the instructions for securing the appliance on Page 22.

The non-combustible hearth must be at least 12mm thick, and project a minimum of 50mm from the base of the appliance in all directions.


The appliance is not suitable for installation against a combustible wall. A combustible side wall must be a minimum of 150mm (Vogue Midi / Midi Midline) or 200mm (Vogue Midi T / Midline T / Highline T 3 Sided) from the appliance. **This does not apply to wall mounted models.**

This appliance can be installed with an up and out flue (vertical wall - horizontal flue) or with a vertical flue with roof termination (see **Flue Options in Site Requirements**).

HEARTH INSTALLATION

(NOT APPLICABLE FOR MIDLINE, HIGHLINE & WALL MOUNTED MODELS)

Building Regulations state this appliance must stand on a non combustible hearth that is at least 12mm thick and projects 50mm minimum from the base of the appliance in all directions, however Gazco recommend the hearth extends to the following dimensions.

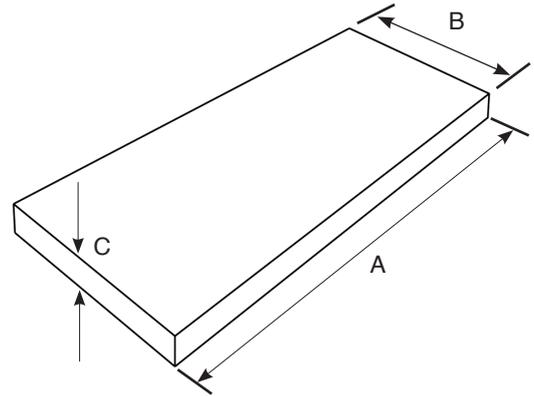

DIMENSIONS	A	B	C
All Models	716mm	498mm	12mm



NOTE: It is not recommended to install Midline/ Highline models on a bench.

MIDLINE & HIGHLINE MODELS

It is not necessary to site these products on a non-combustible floor. However, for practical reasons, the floor should be flat and solid to allow the appliance to be levelled and secured in place.

This appliance may be situated anywhere in the room, but due consideration should be taken to ensure that it is sited within the constraints of the allowable flue configuration.


DO NOT INSTALL APPLIANCE ON A CARPET.

SECURING THE APPLIANCE TO THE WALL (WALL MOUNTED MODELS ONLY)



WARNING: This appliance weighs 62kg. The manufacturer has designed this appliance to attach to a masonry wall and all fixings supplied reflect this. If siting on a studwork wall, the fixing points must be through the timber stud and not plasterboard. Use appropriate fixings. **DO NOT** attach solely to a plasterboard wall.

If installing on a studwork wall it is essential that the battens are located in the fixing area for the wall mounting bracket.

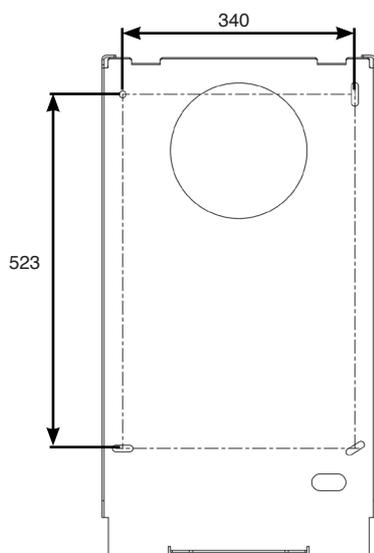

DISTANCE FROM FLOOR / HEARTH LEVEL



It is necessary to leave a minimum gap of 100mm below the base of the wall mounted appliance to ensure servicing access.

MINIMUM CLEARANCE

Freestanding appliances are not suitable for installation against a combustible wall.
(NOT APPLICABLE FOR WALL MOUNTED MODELS.)

Ensure that all minimum clearances to combustible materials are complied with.

The specified clearances provide the minimum distance to combustible materials. If the appliance is intended to be installed into a non-combustible opening the clearance to the **sides and above** the appliance can be reduced. However, it is recommended that the specified clearances are maintained irrespective of the materials used in the construction of the opening to allow adequate air flow and access to controls. **The clearance at the rear of the appliance must always be a minimum of 50mm (NOT APPLICABLE FOR WALL MOUNTED MODELS).**

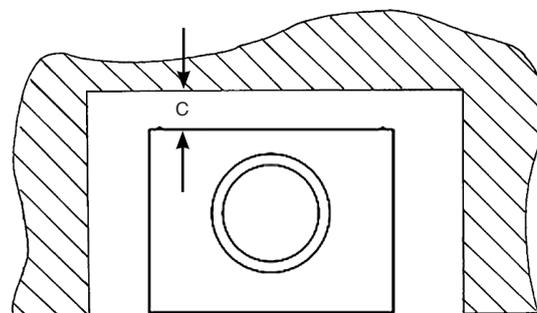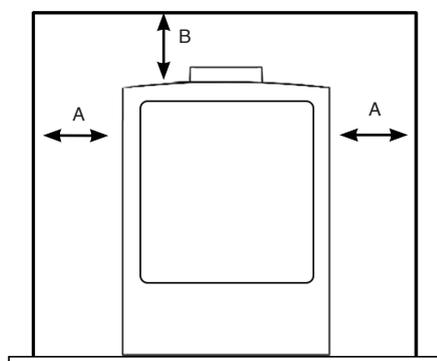

DIMENSION	VOGUE MIDI		
	MIDI / MIDLINE	T 3 SIDED / T MIDLINE / HIGHLINE 3 SIDED	T 3 SIDED WALL MOUNTED
A	150	200	200
B	225	225	400
C	50	50	0

UNPACKING

Remove the appliance from its packaging, and check that it is complete and undamaged. The cast plate is stored on top of the appliance. Remove and store in a safe place. Put the loose ceramic parts to one side so that they are not damaged during installation.

FLUE & CHIMNEY REQUIREMENTS

Note: This appliance must only be installed with the flue supplied.

The following must be adhered to:
The flue must be sited in accordance with BS5440: Part 1 (latest edition).

Fit a guard to protect people from any terminal less than 2 metres above any access such as level ground, a balcony or above a flat roof.

All vertical and horizontal flues must be securely fixed and fire precautions followed in accordance with local and national codes of practice.

Two types of flue terminals are available, horizontal and vertical.

To measure for a horizontal terminal decide on the terminal position.

Measure the height from the top of the appliance to the centre of the required outlet.

For minimum and maximum flue dimensions see relevant sections.

Allow enough room either above or to the side of the appliance to assemble the flue on top.

Assemble a horizontal flue in the following order:

- Vertical section
- 90° elbow
- Horizontal plus terminal

Support the opening of a masonry installation with a lintel.

Only the horizontal terminal section can be reduced in size.

TIMBER FRAMED BUILDINGS

It will be necessary to provide additional clearance when the flue passes through a wall containing any combustible materials so as to prevent a fire hazard.

The hole through which the flue will pass, must have a steel sleeve which is positioned so that an air gap of at least 25mm is maintained between the outer surface of the flue, and any part of the sleeve.

For further guidance on the installation of gas appliances in timber framed buildings, contact your local buildings control authority.

GAS SUPPLY

This appliance is intended for use on a gas installation with a governed meter.

Make sure local distribution conditions (identification of the type of gas and pressure) and the adjustment of the appliance are compatible before installation.

Ensure the gas supply delivers the required amount of gas and is in accordance with the rules in force.

Soft copper tubing can be used on the installation and soft soldered joints outside the appliance.

A factory fitted isolation device is part of the inlet connection; no further isolation device is required.

All supply gas pipes must be purged of any debris that may have entered prior to connection to the appliance.

The gas supply enters underneath the rear of the outer box.


The gas supply must be installed in a way that does not restrict the removal of the appliance for servicing and inspection.

VENTILATION


The installation of this product requires no additional ventilation modifications to the building.

DIMENSIONS (mm)

VOGUE MIDI

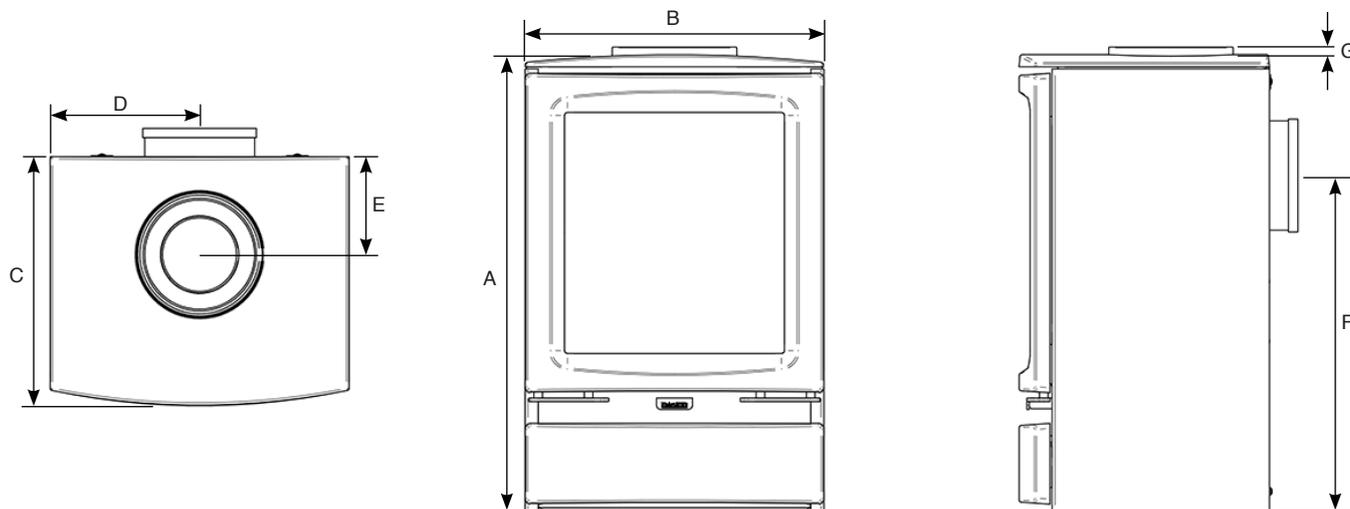


VOGUE MIDI MIDLINE

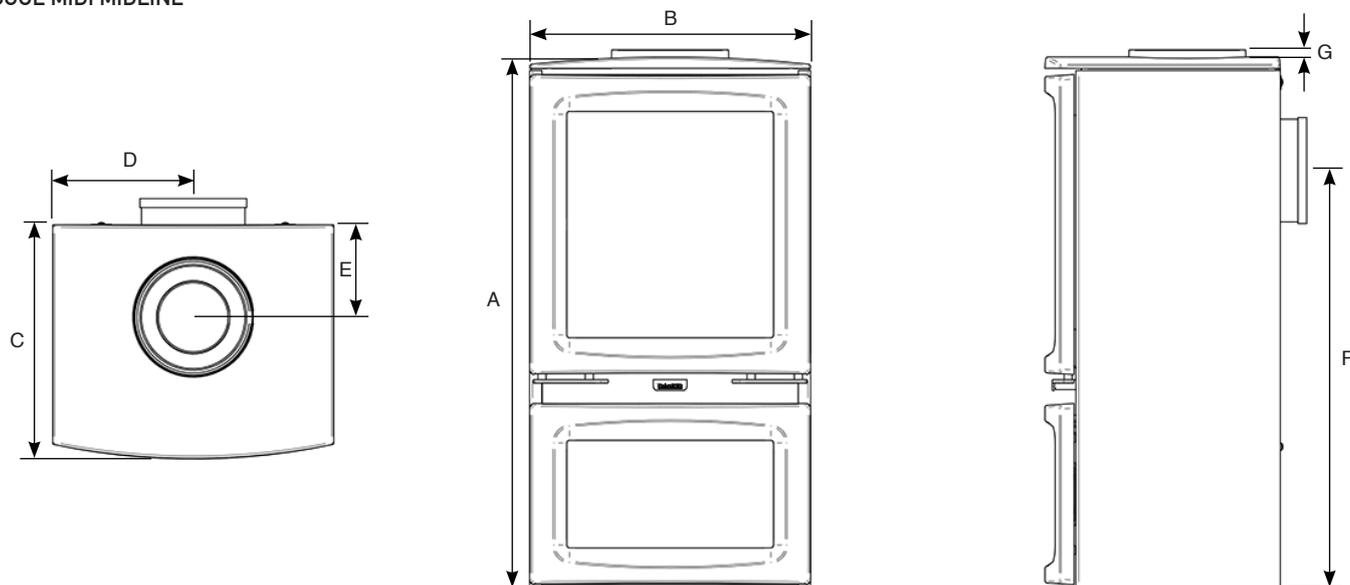


MODEL	A	B	C	D	E	F	G
Vogue Midi	639	416	348	208	137	470	11
Vogue Midi Midline	791	416	348	208	137	622	11

DIMENSIONS (mm)

VOGUE MIDI T 3 SIDED

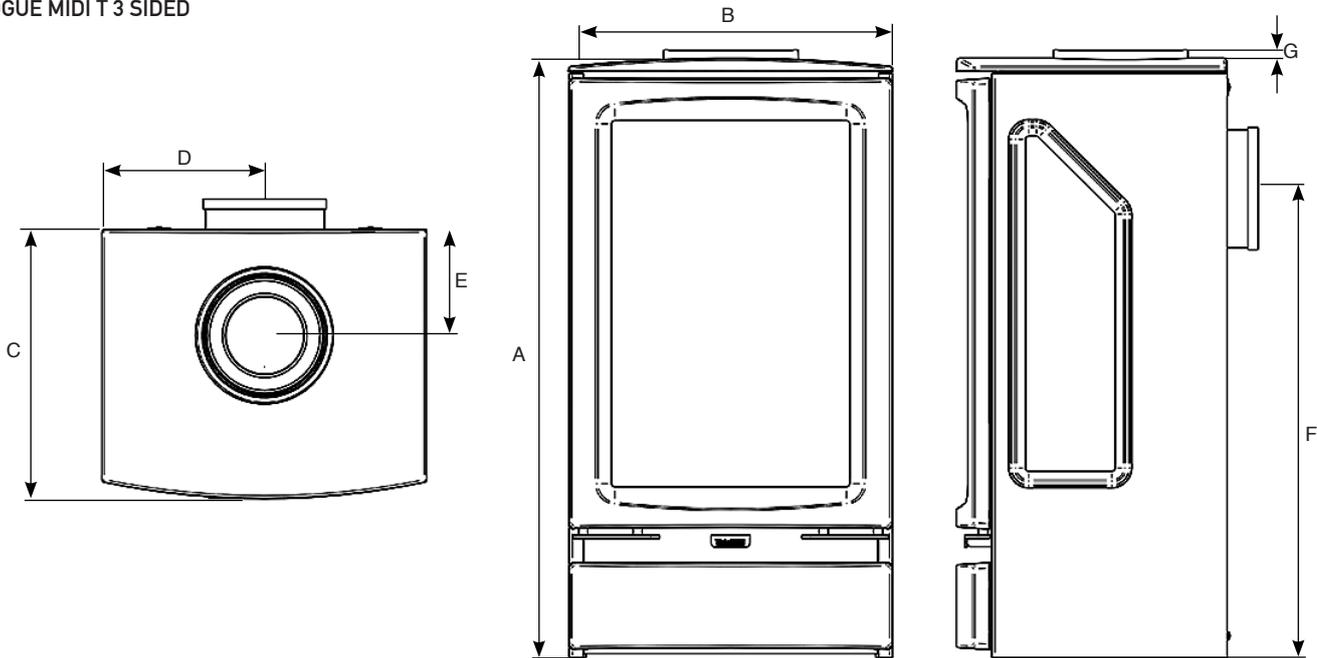


VOGUE MIDI T MIDLINE 3 SIDED

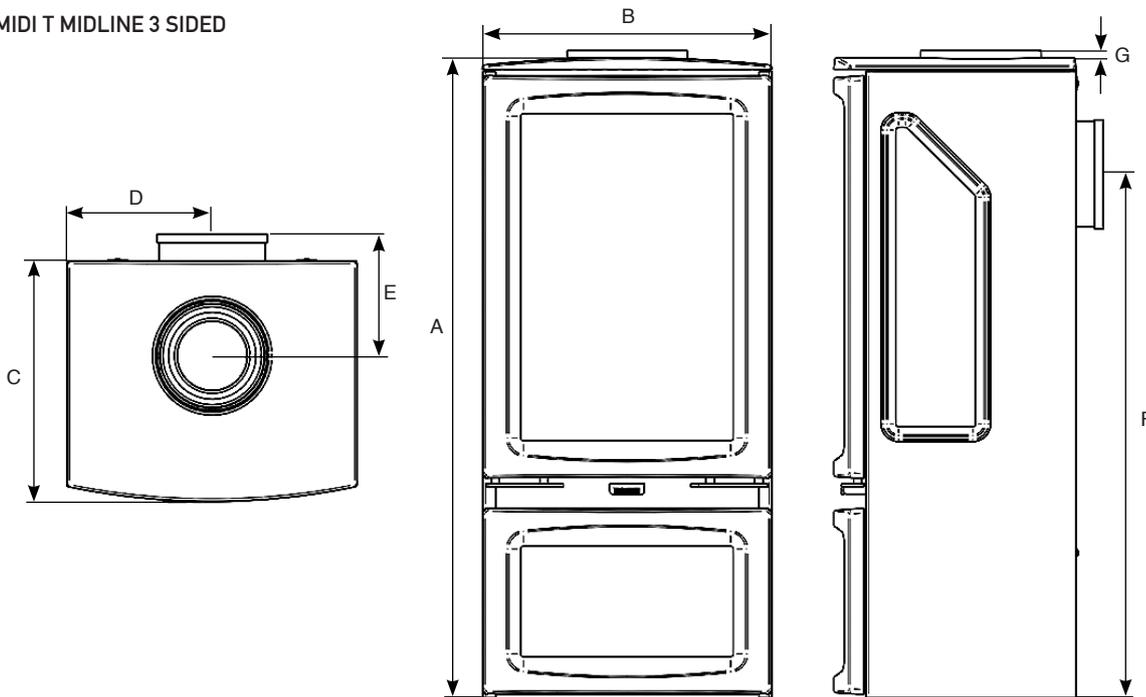

MODEL	A	B	C	D	E	F	G
Vogue Midi T 3 Sided	776	416	348	209	137	607	11
Vogue Midi T Midline 3 Sided	928	416	348	209	137	759	11


DIMENSIONS (mm)

VOGUE MIDI T HIGHLINE 3 SIDED

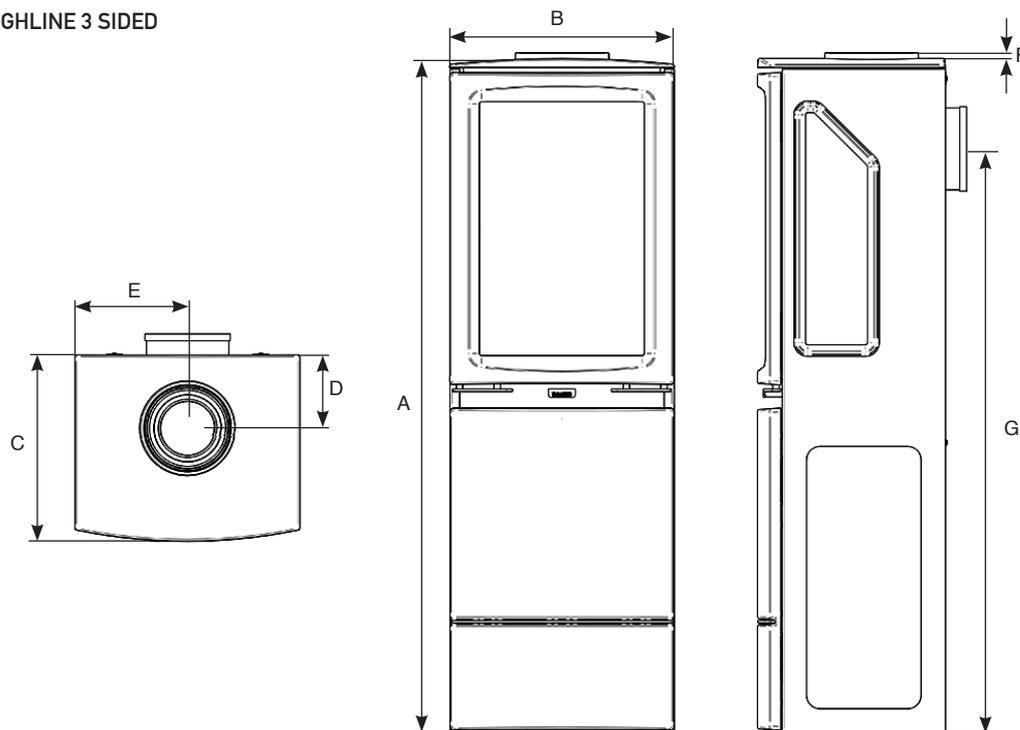

MODEL	A	B	C	D	E	F	G
Vogue Midi T Highline 3 Sided	1260	416	348	137	209	11	1091

VOGUE MIDI T 3 SIDED - WALL MOUNTED

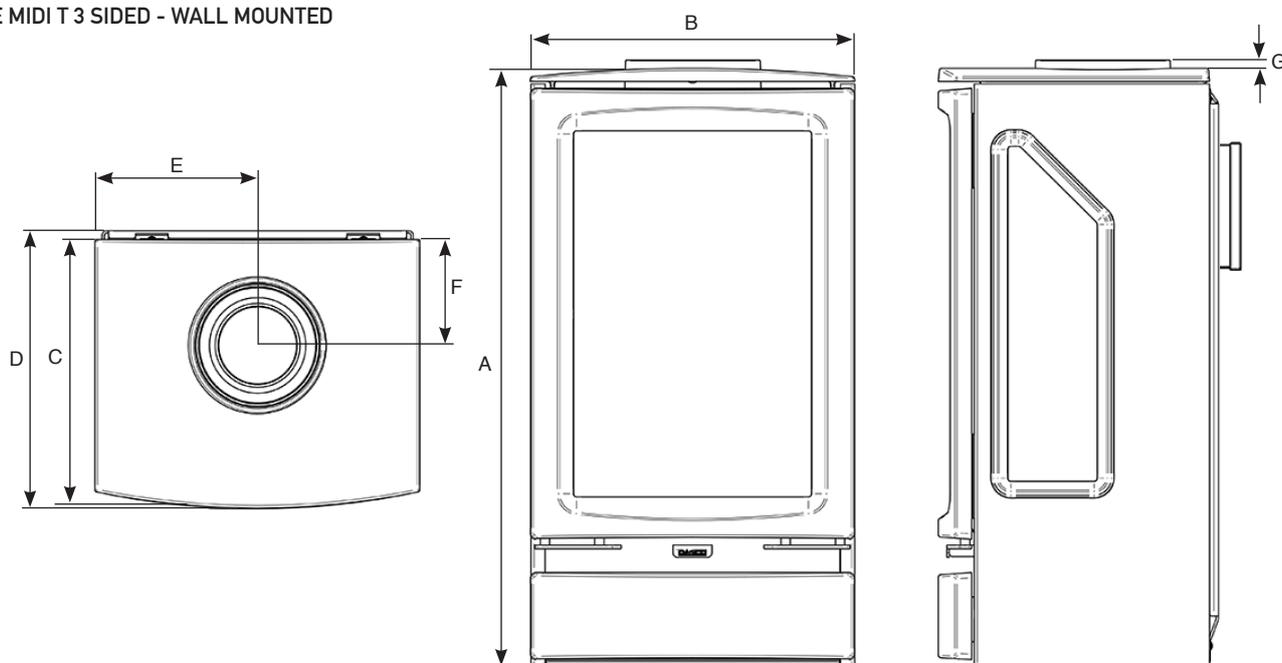

MODEL	A	B	C	D	E	F	G	H
Vogue Midi T 3 Sided - Wall Mounted	776	416	348	360	209	137	11	607

TECHNICAL SPECIFICATION

Covering the following models:

MODEL	VOGUE MIDI	VOGUE MIDI T 3 SIDED	VOGUE MIDI MIDLINE	VOGUE MIDI T MIDLINE 3 SIDED	VOGUE MIDI T WALL MOUNTED 3 SIDED	VOGUE MIDI T HIGHLINE 3 SIDED
Nat Gas	563-016	563-025	563-258	563-300	563-013	563-216
LPG	563-400	563-749	563-790	563-676	563-506	563-458

MODEL	GAS CAT.	GAS TYPE	WORKING PRESSURE	AERATION	INJECTOR	GAS RATE M ³ /H	INPUT KW (GROSS)		COUNTRY
							HIGH	LOW	
VOGUE MIDI	I ₂ H	Natural (G20)	20mbar	2 x Ø7.5mm	063	0.457	4.8	2.5	GB, IE
VOGUE MIDI MIDLINE	I ₃ P	Propane (G31)	37mbar	-	111	0.181	4.8	2.5	
VOGUE MIDI T 3 SIDED	I ₂ H	Natural (G20)	20mbar	2 x Ø8mm	440	0.543	5.7	3.5	
VOGUE MIDI T WALL MOUNTED 3 SIDED									
VOGUE MIDI T MIDLINE 3 SIDED	I ₃ P	Propane (G31)	37mbar	-	111	0.188	5.0	2.9	
VOGUE MIDI T HIGHLINE 3 SIDED									
Rear Exit Wall Thickness - Min 200mm/ Max 550mm									
Vogue Midi - Efficiency Class 1 - 90.6%									
Vogue Midi T - Efficiency Class 1 - 94.3%									
Flue Outlet Size ø 150mm, Flue Inlet Size ø 100mm									
Gas Inlet Connection Size ø 8mm									



The net efficiency of this appliance has been measured as specified in EN613:2001 and the result after conversion to gross using the appropriate factor from Table E4 of SAP 2012 is 81.6% (Vogue Midi Models) & 84.9% (Vogue Midi T Models). The test data has been certified by Kiwa Nederland B.V. The gross efficiency value may be used in the UK Government's Standard Assessment Procedure (SAP) for energy rating of dwellings.

TECHNICAL SPECIFICATION

This appliance has been certified for use in countries other than those stated. To install this appliance in these countries, it is essential to obtain the translated instructions and in some cases the appliance will require modification. Contact Gazco for further information.

PACKING CHECKLIST

ALL MODELS	
Qty Description	Fixing Kit containing:-
For Log Layout 1 x Log Set 1 x Packet of Embaglow	1 x Instruction Manual 2 x M6 x 8 Panhead Screws 1 x 70mm Ø Flue Restrictor
MIDI & MIDI MIDLINE	
	2 x Wood Screws 2 x Rawl Plugs 2 x Wingnuts 4 x Washers
MIDI T 3 SIDED - WALL MOUNTED	
	2 x Washers 4 x Rawbolt Anchor Hex Head Bolts
MIDI T HIGHLINE 3-SIDED	
	2 x Washers 4 x Rawl Plugs 4 x Pozi Flange Screws

VOGUE MIDI / VOGUE MIDI MIDLINE

RESTRICTOR REQUIREMENT - NAT GAS				
VERTICAL & HORIZONTAL FLUE			TOP EXIT - VERTICAL ONLY INCLUDING OFFSET	
Vertical Flue Height	Horizontal Length	Restrictor Size	Vertical Flue Height	Restrictor Size
500mm - 999mm	250mm - 500mm	No restrictor	2000mm - 4999mm	Ø 52mm (Sliding)
1000mm - 1499mm	250mm - 1000mm	No restrictor	5000mm - 10,000mm	Ø 47mm (Sliding)
1500mm - 3000mm	250mm - 5000mm	Ø 70mm		
RESTRICTOR REQUIREMENT - LPG				
VERTICAL & HORIZONTAL FLUE			TOP EXIT - VERTICAL ONLY INCLUDING OFFSET	
Vertical Flue Height	Horizontal Length	Restrictor Size	Vertical Flue Height	Restrictor Size
500mm - 999mm	250mm - 500mm	Ø 75mm	2000mm - 4999mm	Ø 52mm (Sliding)
1000mm - 1499mm	250mm - 1000mm	Ø 75mm	5000mm - 10,000mm	Ø 47mm (Sliding)
1500mm - 3000mm	250mm - 5000mm	N/A		

VOGUE MIDI T 3 SIDED / VOGUE MIDI T MIDLINE 3 SIDED / VOGUE MIDI T WALL MOUNTED 3 SIDED / VOGUE MIDI T HIGHLINE 3 SIDED


RESTRICTOR REQUIREMENT - NAT GAS/ LPG				
VERTICAL & HORIZONTAL FLUE			TOP EXIT - VERTICAL ONLY INCLUDING OFFSET	
Vertical Flue Height	Horizontal Length	Restrictor Size	Vertical Flue Height	Restrictor Size
500mm - 999mm	250mm - 1000mm	No restrictor	2000mm - 4999mm	Ø 52mm
1000mm - 1499mm	250mm - 1000mm	Ø 70mm	5000mm - 10,000mm	Ø 47mm
1500mm - 3000mm	250mm - 5000mm	Ø 60mm		

SITE REQUIREMENTS

REAR FLUE

This flue extends horizontally from the back of the appliance.

ALL MODELS (8526)

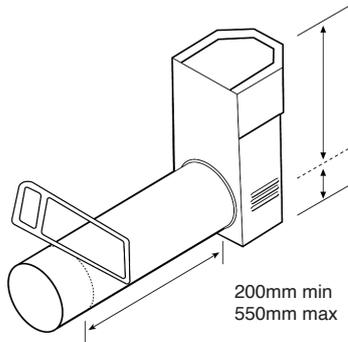

Terminal dimensions:
395 x 200 x 200 mm (H x W x D)
Guard supplied
Cut to length as required on site.

TOP FLUE

There are two types of flue terminal: **Horizontal** and **Vertical**.

FOR HORIZONTAL TERMINAL INSTALLATIONS:

Decide on the terminal position.

Measure the height from the top of the appliance to the centre of the required hole. For minimum and maximum dimensions see all Up and Out Diagrams.

To fit the flue access is required to the top or the side of the appliance to connect the flue.

Assemble the vertical sections making sure the top plate and flue collar are fitted before the flue pipe.

Add the 90° elbow.

Add the horizontal section and terminal.
Only the horizontal terminal can be reduced in size.

A masonry installation requires the addition of a suitable lintel to support the opening. Refer to Technical Information for details of the flue length

TOP FLUE UP AND OUT KIT


This flue rises vertically from the top of the appliance, then continues horizontally outward.

The basic kit comprises:


ALL MODELS (8523/8523AN)

- 1 x 500mm vertical length
- 1 x 500mm terminal length
- 1 x 90 degree elbow
- 1 x wall plate
- 1 x 52mm restrictor
- 1 x 60mm restrictor
- 1 x 75mm restrictor
- 4 x fixing screw

Vogue Midi/ Midline

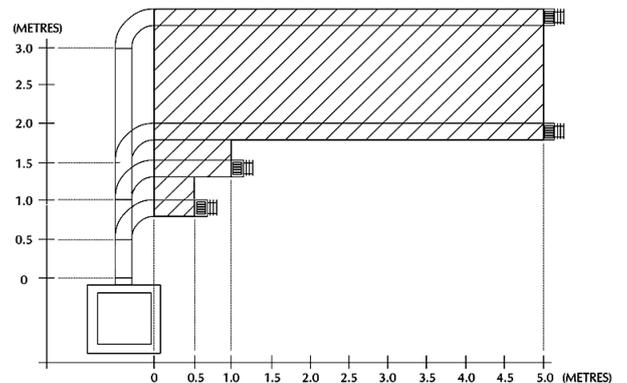

Vogue Midi T/ Midline/ Highline

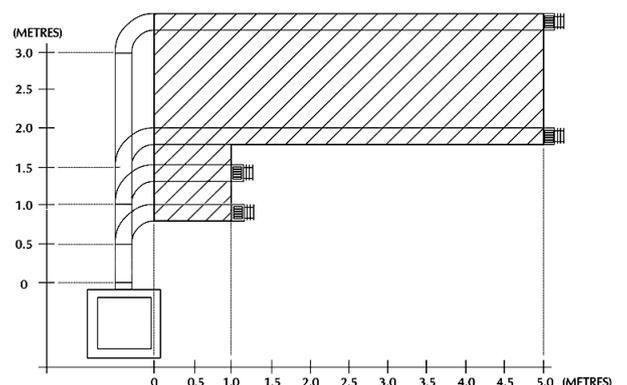


This kit provides the minimum materials. Extra lengths can be added to the vertical and horizontal sections.

Refer to Technical Specification to identify when to use a restrictor.

TOP FLUE UP AND OUT WITH ADDITIONAL BEND

An additional bend can be used on the horizontal section (45° or 90°) but the overall horizontal flue is reduced.

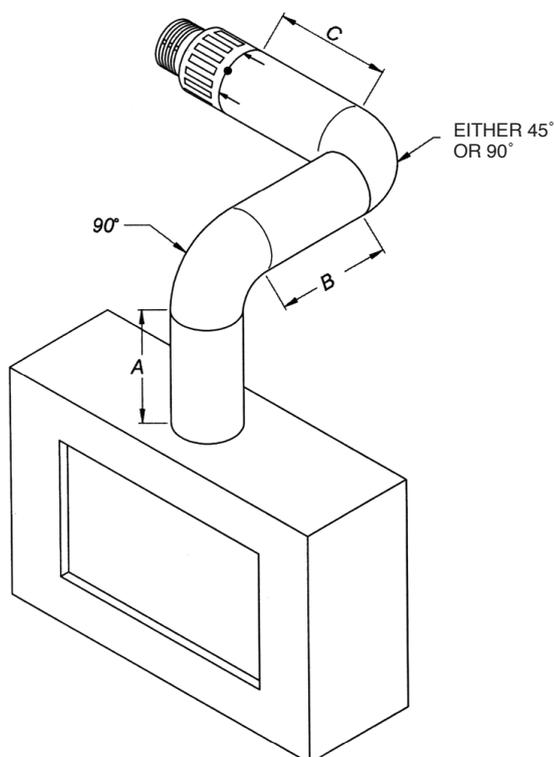

When A = 1.0 to 1.499 metres B+C = 1.0 metre max (Nat Gas - No restrictor, LPG - 75mm Restrictor)
 When A = 1.499 to 3.0 metres B+C = 4.0 metres max (Nat Gas - 70mm restrictor, LPG - No restrictor)

TOP FLUE VERTICAL KIT

This flue is vertical from the top of the appliance, see Diagram right. A minimum vertical rise of 3m to a maximum of 10m.

999-539/999-539AN - VOGUE MIDI/ MIDLINE MODELS

The basic kit comprises:

- 2 x 1m lengths
- 1 x 1m terminal lengths
- 1 x 52mm restrictor (sliding plate assembly)
- 1 x 47mm restrictor (sliding plate assembly)

8524/8524AN - VOGUE MIDI/ MIDLINE/ HIGHLINE T MODELS


The basic kit comprises:

- 2 x 1m lengths
- 1 x 1m terminal length
- 1 x 52mm restrictor
- 1 x 47mm restrictor
- 1 x 60mm restrictor - Not used on this appliance
- 1 x 70mm restrictor - Not used on this appliance

ALL MODELS

Extra lengths can be added.

Refer to Technical Specification to identify when to use a restrictor.

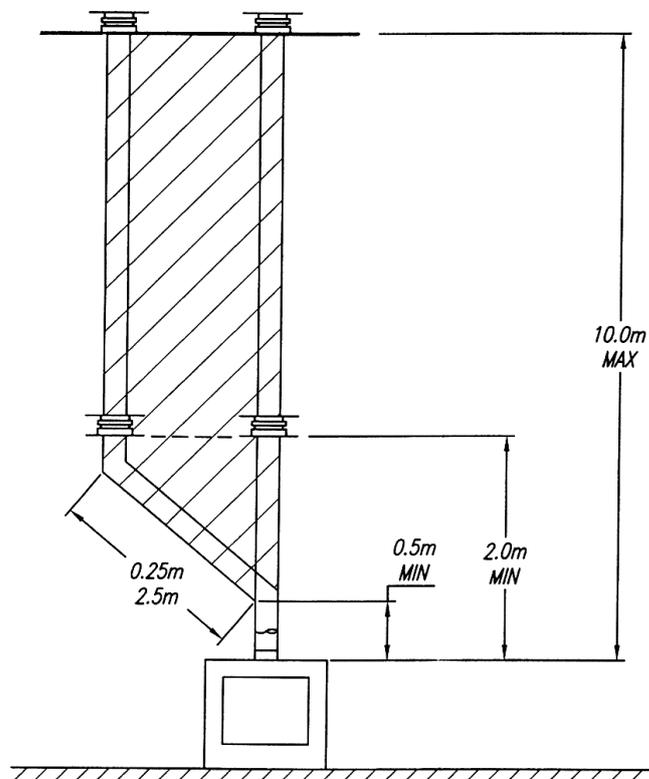

TOP FLUE VERTICAL OFFSET KIT

8530/8530AN

Used with kits 999-539 and 8524. A minimum rise of 500mm is required to the first bend, see Diagram.

OPTIONAL EXTRA FLUE LENGTHS AND BENDS

NOMINAL LENGTH	ACTUAL LENGTH	STAINLESS FINISH	ANTHRACITE FINISH
200mm	140mm	8527	8527AN
500mm	440mm	8528	8528AN
1000mm	940mm	8529	8529AN
45° Bend	N/A	8507	8507AN
90° Bend	N/A	8508	8508AN
Optional Flue Collar		8548MB	

INSTALLATION

SAFETY PRECAUTIONS

For your own and other's safety, you must install this appliance according to local and national codes of practice. Failure to install the appliance correctly could lead to prosecution. **Read these instructions before installing and using this appliance.**

These instructions must be left intact with the user.

Do not attempt to burn rubbish on this appliance.

Keep all plastic bags away from young children.

Do not place any object on or near to the appliance and allow adequate clearance above the appliance.

IF THE APPLIANCE IS EXTINGUISHED OR GOES OUT IN USE, WAIT 3 MINUTES BEFORE ATTEMPTING TO RELIGHT THE APPLIANCE.



IMPORTANT: REFER TO DATA BADGE AND TECHNICAL SPECIFICATION AT THE FRONT OF THE MANUAL TO ENSURE THE APPLIANCE IS CORRECTLY ADJUSTED FOR THE GAS TYPE AND CATEGORY APPLICABLE IN THE COUNTRY OF USE.

UNPACKING

Remove the appliance from its packaging, and check that it is complete and undamaged.

The cast plate is stored on top of the appliance. Remove and store in a safe place.

Put the loose ceramic parts to one side so that they are not damaged during installation.

UPGRADING THE APPLIANCE

The appliance is fitted with a control valve that can easily be upgraded to battery powered remote control.

There are two versions of this control which can be obtained through your local Gazco stockist.

There is no requirement for this upgrade to be carried out by an approved Gas engineer. However Gazco recommend that this task is undertaken by a suitably competent person.

This upgrade can be fitted before or after installation but if side clearances are limited then it will be easier to upgrade the appliance before installation. Full instructions are included with the kit.



If the appliance is left unattended for long periods of time (e.g. vacation), it is recommended to place the control valve in the Off or Pilot position.

Take care when leaving the appliance unattended, in exceptional circumstances sound waves from sources other than the transmitter can cause changes in the flame height adjustment.

DO NOT install two or more appliances using upgradeable controls in the same room, interference between the remote control frequencies can occur.

STANDARD REMOTE CONTROL

(PART NUMBER 8455)

This remote control can control the gas appliance after the pilot has been lit. It can turn the main burner on and regulate it from low through to high and back again.

It can turn the main burner off leaving the pilot burning.

THERMOSTATIC AND TIMER REMOTE CONTROL (PART NUMBER 8456)

This remote control can control the gas appliance after the pilot has been lit.

MANUAL MODE

Can be used to turn the main burner on and manually regulate it from low through to high and back again. It can also be used to turn the main burner off leaving the pilot burning.

AUTO MODE

Will automatically regulate the room to a pre-set temperature.

TIMER MODE

Will turn the appliance on and off according to a pre-set programme and automatically regulate the room temperature during the two on periods.


INSTALLATION OF THE APPLIANCE



IMPORTANT: THE OUTER PANELLING OF THE VOGUE MIDI IS MADE FROM CAST IRON. USE CAUTION WHEN INSTALLING, REMOVING AND STORING AS THE COMPONENTS ARE HEAVY AND SHOULD BE HANDLED CAREFULLY.


VOGUE MIDI MODELS

Remove the plinth to access the controls by lifting the hooks clear of the slots on the front of the appliance.

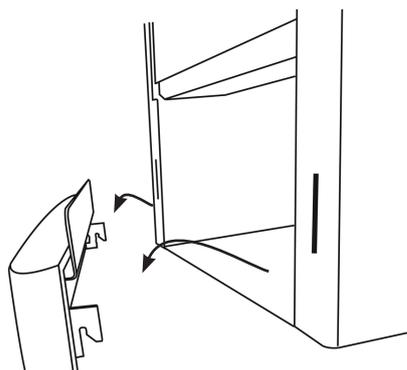


VOGUE MIDI MIDLINE & HIGHLINE MODELS

Pull the lower door open from the right hand side to access the controls.

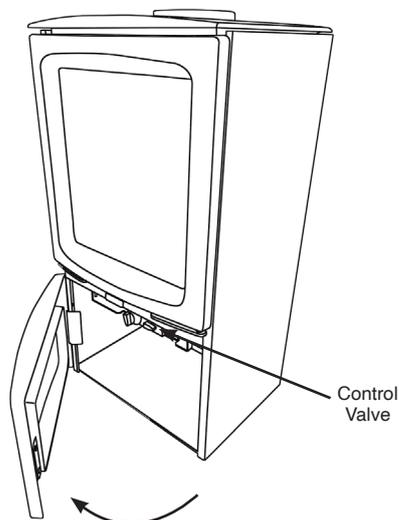

ALL MODELS

Remove the frame to gain complete access to the control valve and the viewing aperture by lifting the hooks clear of the slots on the front of the appliance.

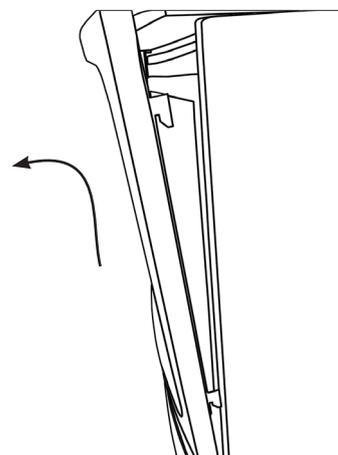


SECURING THE APPLIANCE TO THE HEARTH

VOGUE MIDI & VOGUE MIDI T 3 SIDED

The appliance sits on a mounting bracket to secure it in place to either the hearth or bench.

Position the appliance:
Loosely attach the bracket to the appliance and place centrally on the hearth OR in the desired position on the bench. Remove the appliance leaving the bracket in the correct position and mark the holes to drill the bracket screws.

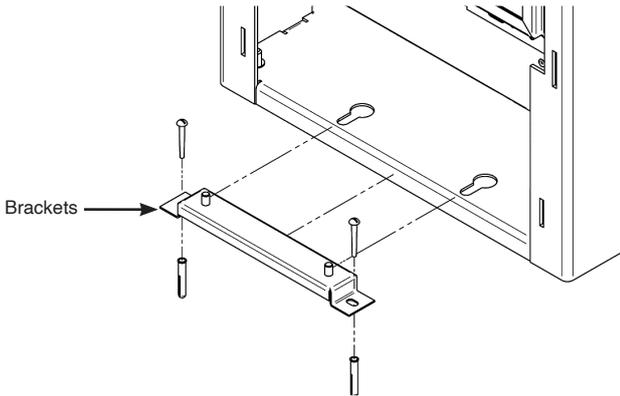


Remove the bracket and drill the guide holes.

Fix the bracket either to the hearth or the bench.

NOTE: Use the wood screws and rawl plugs in the fixing kit supplied for hearth mounting installations and the coach bolts supplied with the bench for installation onto a bench.

Lift the appliance so as to locate the key slots in the carcass onto the fixing screws. There are two large holes the lower flanges on the front edges of the base.

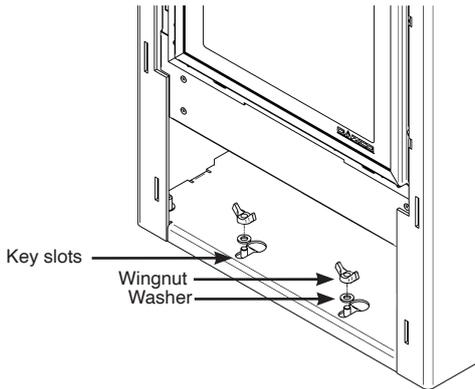


Place the 2 large washers over the studs and fix with 2 wingnuts.

VOGUE MIDI T HIGHLINE 3 SIDED

The appliance has four slot in the base plate to secure in place with the screws provided.

Position the appliance and mark the holes to drill for the screws.

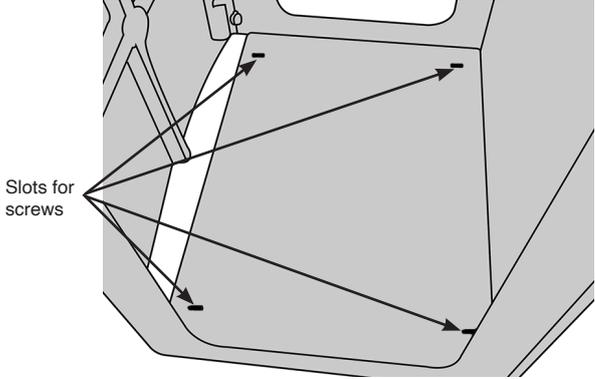

Remove the appliance and drill the guide holes.

Insert the rawl plugs into the guide holes.

Reposition the appliance and use the wood screws in the fixing kit supplied for hearth mounting installations to secure in place.


SECURING THE APPLIANCE TO THE WALL

VOGUE MIDI T 3 SIDED WALL MOUNTED ONLY


To install the Vogue as a wall mounted product it will be necessary to remove the rear vanity panel.

Remove the 4 screws, Arrow A.

Loosen the 4 screws, Arrow B.

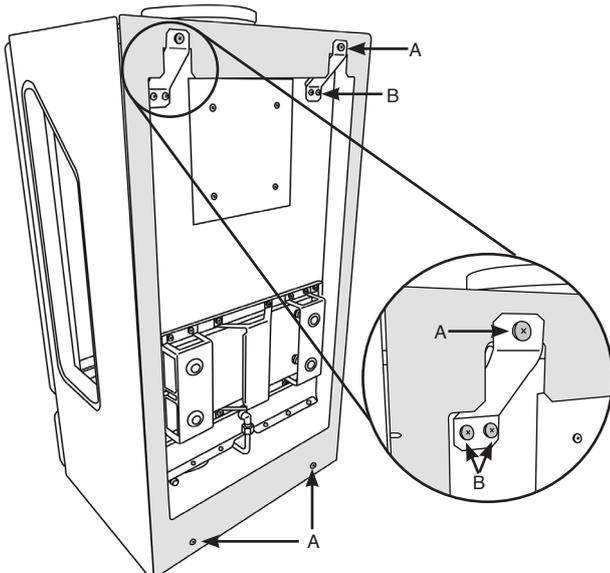

Lift the vanity panel off the top brackets.

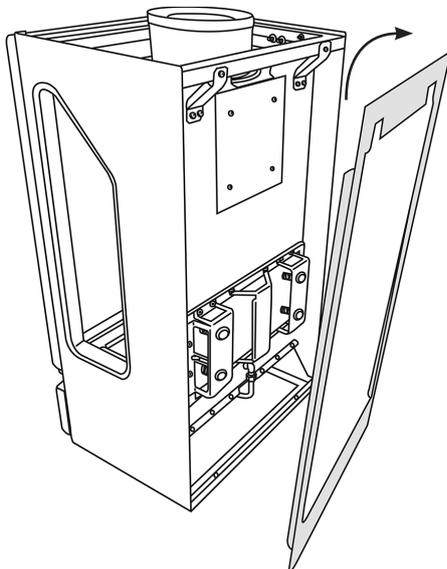


Tighten the 4 loose screws (Arrow B) and replace the top 2 screws (Arrow A).



WARNING: This appliance weighs 62kg. The manufacturer has designed this appliance to attach to a masonry wall and all fixings supplied reflect this. If siting on a studwork wall, the fixing points must be through the timber stud and not plasterboard. Use appropriate fixings. **DO NOT** attach solely to a plasterboard wall.




The fixings supplied for the Wall Mounted Kit are R-RBL Rawlbolts and should be fitted in the method described below.

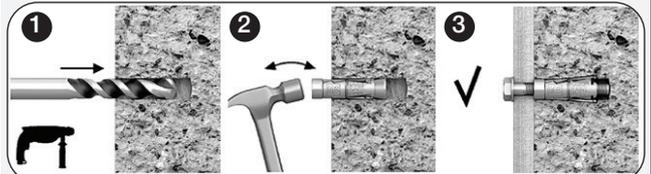

Ensure a minimum substrate thickness of 100mm.

1. Drill a hole - Width: 14mm x Depth: 65mm.
Note: When fixing into brickwork, mortar joints should be avoided
Remove debris and thoroughly clean hole with brush and pump
2. Remove pre-assembled bolt and washer. Insert shield into hole and tap home with hammer until flush with surface
3. Insert bolt with washer through fixture into the shield
Tighten to 15Nm torque.


If installing on a studwork wall it is essential that the battens are located in the fixing area for the wall mounting bracket.

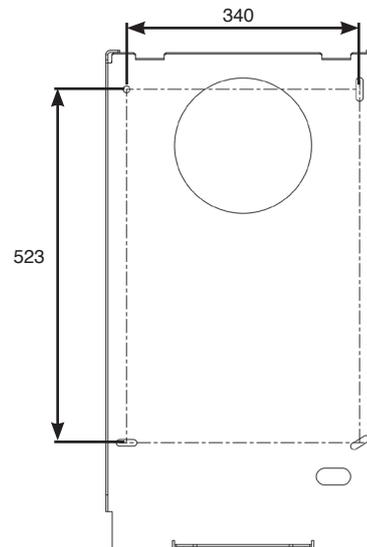

Position the wall mounting bracket in the required location.

Mark and drill the top left hand fixing hole.

Secure with a screw, see arrow A.
Do not tighten at this point.

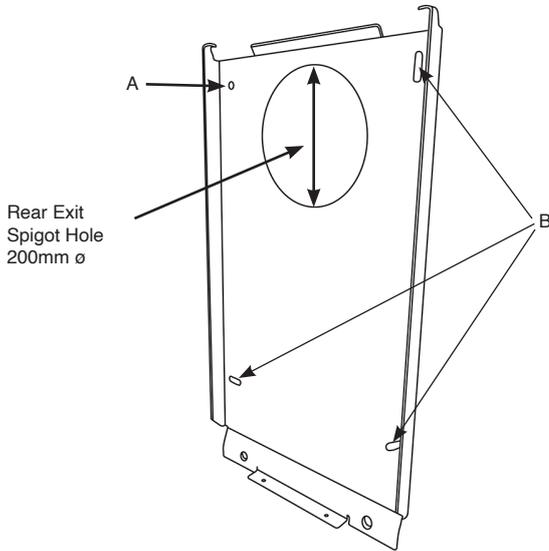

Level the wall mounting bracket and mark the remaining 3 holes, arrow B.

Remove the wall mounting bracket and drill the fixing holes.


Rear Exit only: Cut a hole for the flue exit (see Flue Assembly for details).

Replace the wall mounting bracket and secure with the screws. Do not tighten at this point.


Level the wall mounting bracket, adjusting if necessary. Tighten the 4 screws.

WARNING: This appliance is heavy and should be handled with care. Two people must be used to lift this appliance.

Hook the top of the bracket under the top of the carcass at an angle and lower gently into position. Ensure that the bracket is fully engaged.

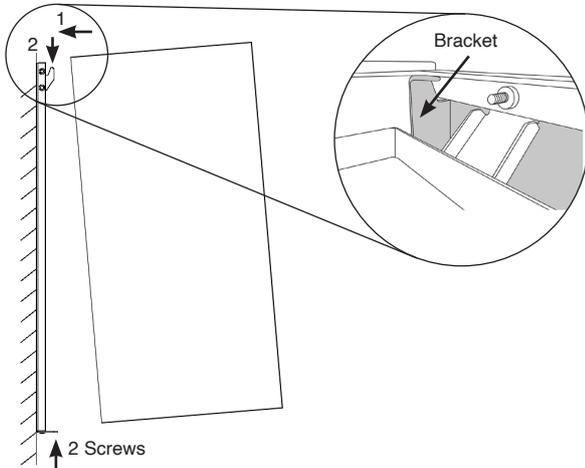

NOTE: The top rear edge of the appliance must locate between the back lip of the wall mounting bracket and the raised supports.

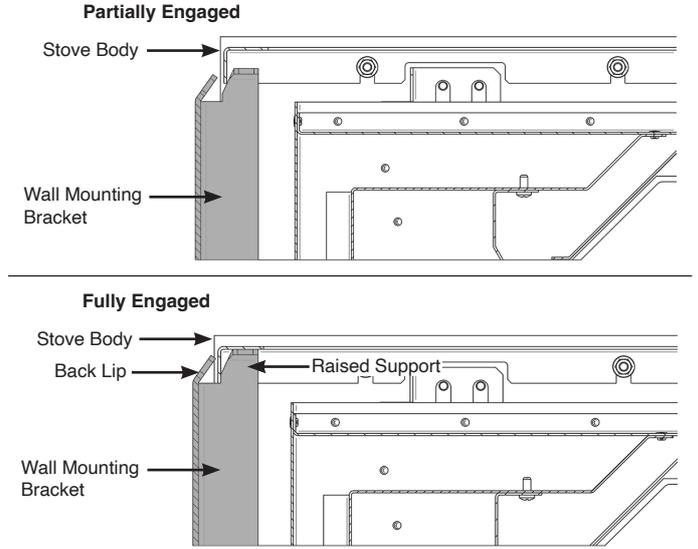


Secure through the base of the bracket from underneath with the 2 screws provided.

IMPORTANT: If it is required to access the rear explosion relief for servicing the appliance must first be removed from the wall.


TOP OR REAR EXIT

Before locating the appliance choose the correct flue outlet position.


The appliance is supplied as a top exit configuration. To switch outlets remove the cast top plate and decorative flue collar.

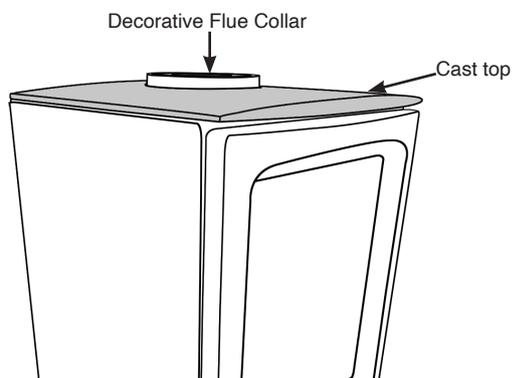


The cast top plate lifts off to give access to the inner and outer flue spigots.

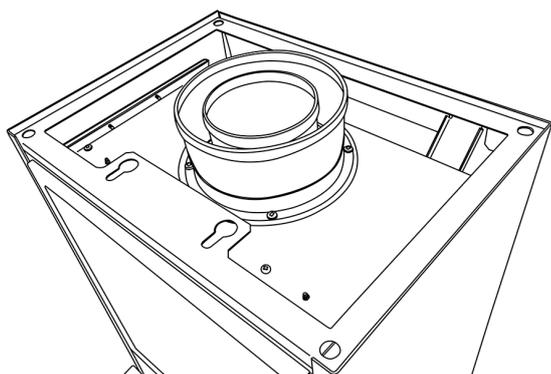


Remove the 8 screws securing the inner & outer spigots.

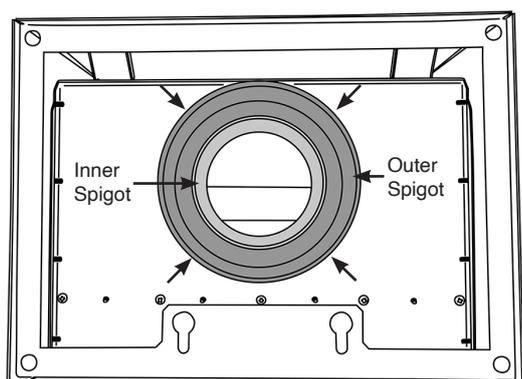


Swap the inner and outer flue spigots **only** with the inner and outer blanking plates on the rear of the appliance.

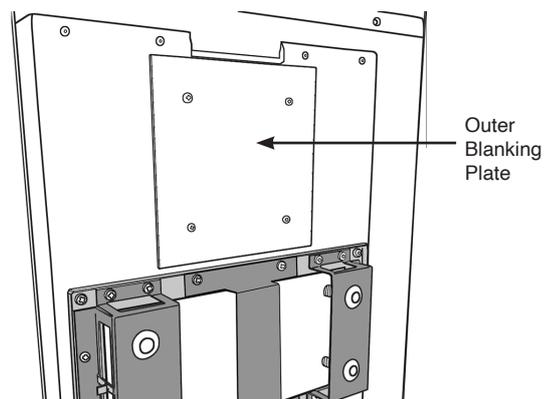


Attach the decorative flue blanking plate support bracket to the underside of the cast top using the screws provided. Ensure the folded return is pressed against the cast top.

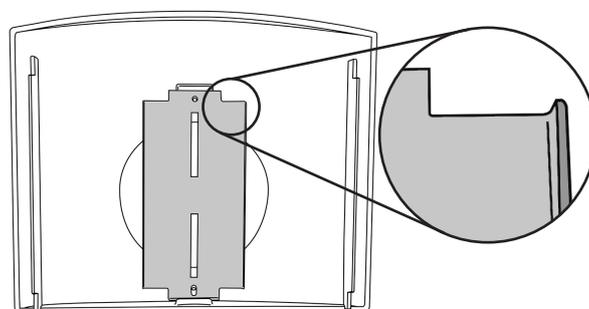

Sit the decorative flue blanking plate in position.

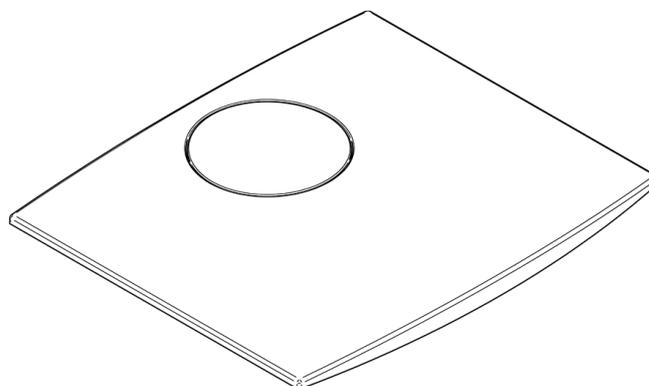

Replace the cast top. When fitted properly the cast plate should sit flush with the rear of the stove.

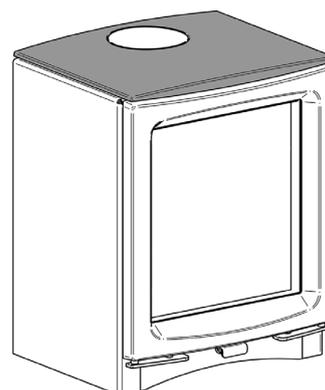


Vogue Midi Shown

HIGHLINE FREESTANDING BACK PANEL (OPTIONAL)

The Vogue Highline can be supplied with an optional back panel to allow the appliance to be installed in a manner where it can be viewed from 360° without viewing the engine components. Consult your Gazco retailer for details.


To fit the back panel:

Loosen the two screws on the rear of the appliance.
Do not remove completely.

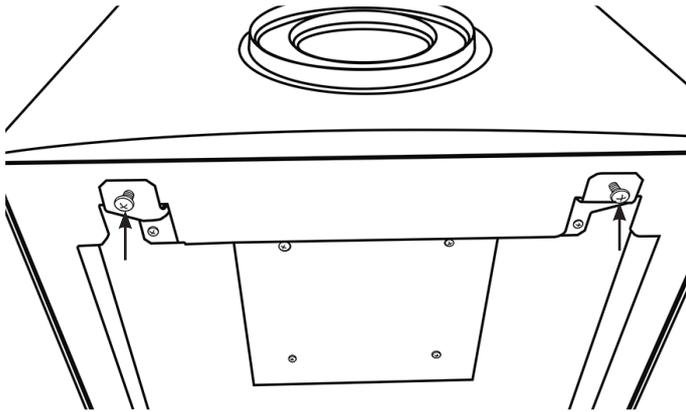


Attach the supplied Gas pipe extension to the gas inlet of the appliance.
This will run centrally down the back of the plinth and allow the gas supply to be connected at floor level as required.


Hook the top of the back panel over the extended rear screws.

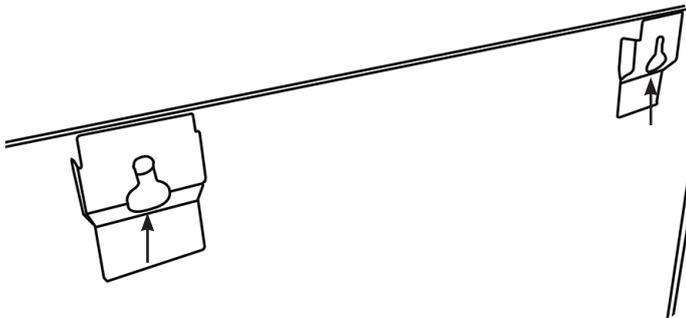

Lower the panel and hook the lower brackets over the edge of the appliance body mid way down.

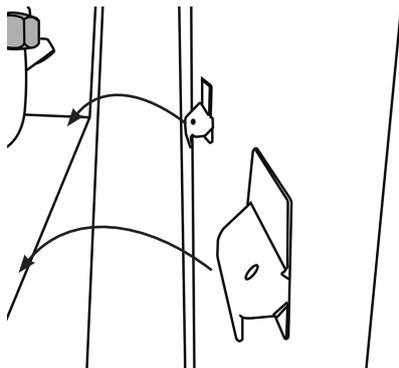

Take care when fitting the back panel not to catch the gas inlet extension pipe. This will protrude from the cutout at the bottom of the panel.

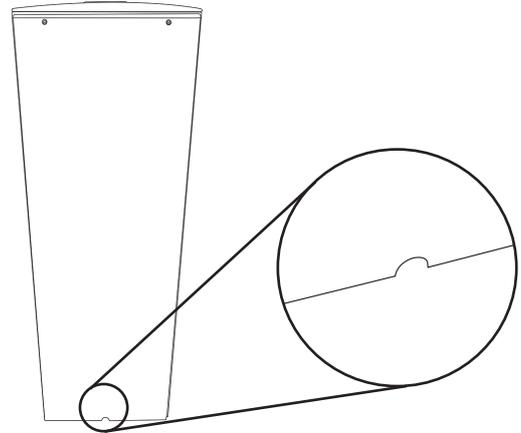

Refer to **Site Requirements**.

FLUE ASSEMBLY

Refer to **Site Requirements** for more details..

REAR EXIT - HORIZONTAL FLUE

FLUE LENGTH

Wall Mounted Models:


Measure the total wall thickness and add 25mm.

Other Models:

Measure the total wall thickness and add 75mm.
The total flue length gives a minimum clearance of 50mm between the rear of the appliance and the wall.

Insert the square cardboard sleeve into the flue to support the inner tube.

Cut through the flue and sleeve.

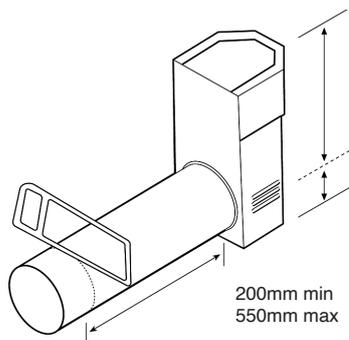

REMOVE THE CARDBOARD REMNANTS FROM THE FLUE.

File the cut edges smooth.

WALL MOUNTED BRACKET ONLY

Using the wall mounting bracket as a template, cut a 200mm ϕ hole on the internal wall only.
Cut a 150mm hole on the outer wall for the terminal exit.

The Wall Mounted Kit is supplied with a protective sleeve for the flue. This can be rolled to fit through the hole in the internal wall.

Feed the sleeve through the hole in the internal wall. This will expand in the cavity to protect the flue from debris etc.

Fit the flue as detailed

ALL MODELS

Terminal

On the outside wall:

Position the flue assembly into the hole. The terminal should be flat against the wall.

Make sure the terminal is vertical.

Mark the four fixing holes.

Remove the terminal to drill the holes.


Insert wall plugs supplied.

DO NOT FIX THE FLUE AT THIS STAGE.

FLUE AND APPLIANCE FIXINGS

Position the appliance observing appropriate clearances.

Apply a bead of suitable weatherproof sealant (silicone or similar) to perimeter of back face of terminal.

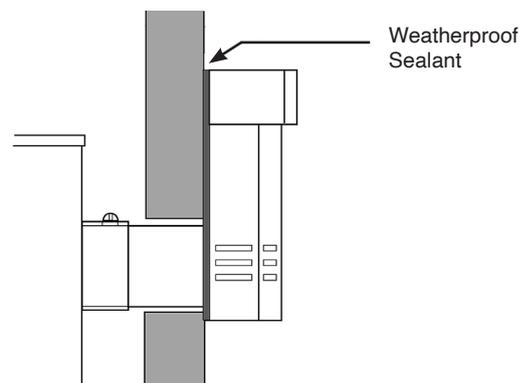

Feed the flue through the wall, making sure it runs smoothly.

On the inside wall:

Engage the flue in the inner and outer spigots.


Make sure rubber seals on the spigots are not damaged.

From outside:

Insert four screws in the flanges of the flue terminal.

Check sealant has formed a water-tight joint to the wall.

Any terminal less than 2m above any access (level ground, balcony or flat roof with access) must be fitted with the guard supplied.

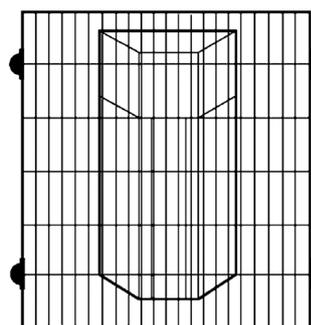

TOP EXIT - UP & OUT



ENSURE THE BLACK DECORATIVE TOP AND COLLAR ARE FITTED TO THE TOP OF THE APPLIANCE PRIOR TO INSTALLATION OF A TOP FLUE EXIT. THIS MUST BE POSITIONED BEFORE INSTALLING THE FLUE.



A restrictor may be required with top exit flues. See Technical Specification for restrictor sizes.


WALL PLATE

A wall plate is supplied to secure the flue to the inside wall. Bend the securing tab to 90° and slot the plate over the flue before bringing the flue through the wall.

Mark the fixing holes using the wall plate as a template. The tab can be above or beneath the flue.

FLUE APERTURE

Mark the height from the top of the appliance to the centre of the horizontal section.

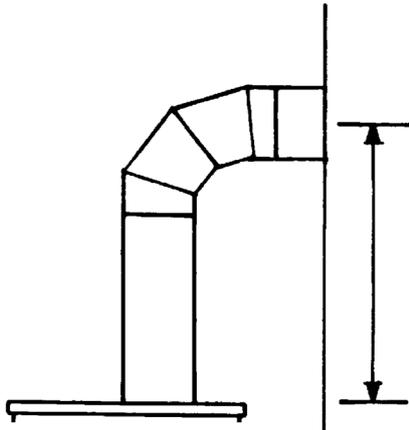

TAKE CARE TO MARK OUT THE FLUE CORRECTLY. IT IS DIFFICULT TO MOVE AFTER INSTALLATION.

Create a 152mm diameter hole for the flue using either:

- a) a core drill, or
- b) a hammer and chisel


Make good at both ends of the hole.

FLUE LENGTH

The final length of the flue pipe includes the terminal. The terminal is the only section that can be shortened.

DO NOT SHORTEN ANY OTHER SECTION OF FLUE PIPE. Measure from the outside of the wall to the stop on the 90° elbow.


Fit horizontal flue section between the elbow and the terminal at this stage, if required.

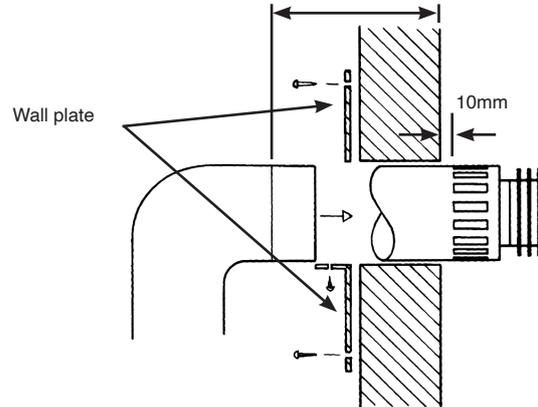

Mark the correct length all the way around the flue terminal section.

Insert the square cardboard sleeve into the flue to support the inner tube.

Cut through the flue and sleeve.

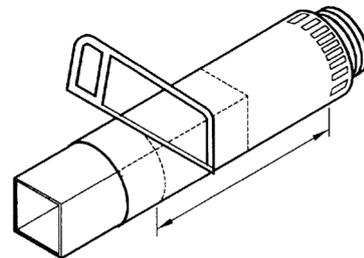

REMOVE THE CARDBOARD REMNANTS FROM THE FLUE.

File the cut edge smooth.

FLUE AND APPLIANCE FIXINGS

Pull appliance and flue assembly away from the hearth.

Drill 4 fixing holes for the wall plate and insert wall plugs supplied.

Put the horizontal flue onto the elbow and reposition the appliance.

Check the flue runs smoothly through the wall.

Fix the wall plate to the wall using the 4 black screws provided.

Drill through the fixing tab of the wall plate using a 3.5mm drill.

Secure with the screw provided.

Make good and weatherproof around the outside of the flue.

TOP EXIT – VERTICAL FLUE

Where a vertical only flue system has been purchased, refer to Site Requirements.

Pay careful attention to the following:

- Terminal positions
- Flue supports
- Weatherproofing
- Fire precautions

Local and national codes of practice must be followed for all the above.




A restrictor must be fitted with vertical flues. See Technical Specification on page 14 for restrictor sizes.



PLEASE NOTE: When installing the appliance in conjunction with vertical termination kit Gazco Part No. 999-539, this kit differs in that it has restrictors with sliding plates. Please ensure you have the correct kit before proceeding with the installation.

It is important that the sliding restrictor assembly is used when using Vertical Termination kit 999-539. The restrictor assembly must be fitted with the slide collars uppermost and the top restrictor plate must be checked to ensure it moves freely before the flue is fitted.

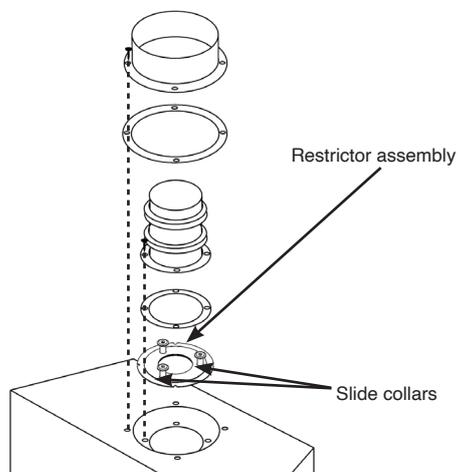


GAS SOUNDNESS PRESSURE CHECK


This is essential to expel any debris that may block the gas controls.

Connect the gas to the 8mm elbow on the rear of the appliance.

VOGUE MIDI & MIDLINE

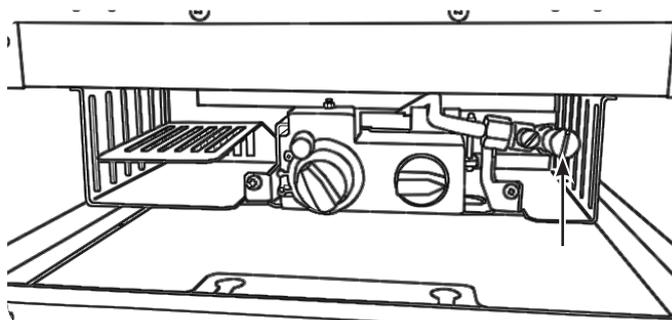

VOGUE MIDI, MIDLINE & HIGHLINE T 3 SIDED

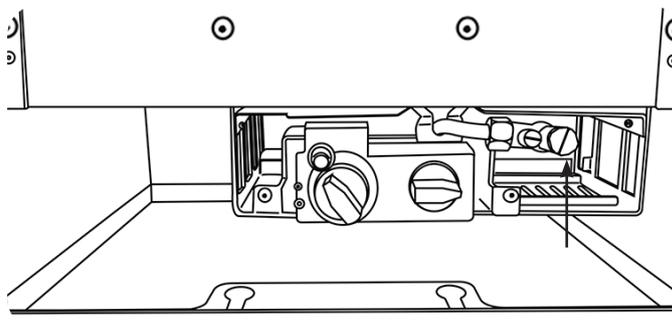


Connect a suitable pressure gauge to the test point located on the inlet fitting and turn the gas supply on. Light the appliance and check all gas joints for possible leaks. Turn the appliance to maximum and check that the supply pressure is as stated on the databadge. Turn the gas off and replace the test point screw, turn the gas on and check the test point for leaks.


REMOVING THE GLASS

Using a screwdriver remove the 4 screws securing the window panel to the appliance.
Take care to support the glass when removing the screws.

VOGUE MIDI & MIDLINE

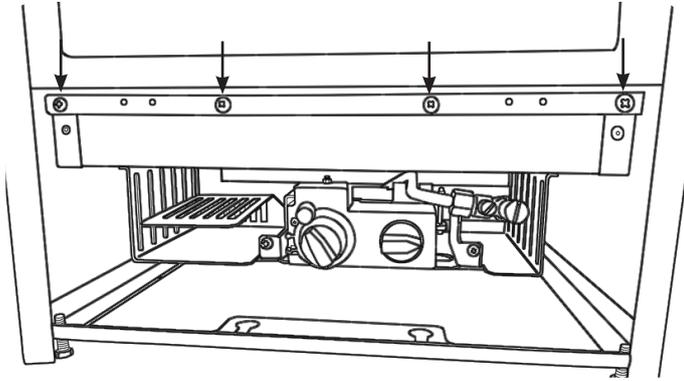


VOGUE MIDI, MIDLINE & HIGHLINE T 3 SIDED

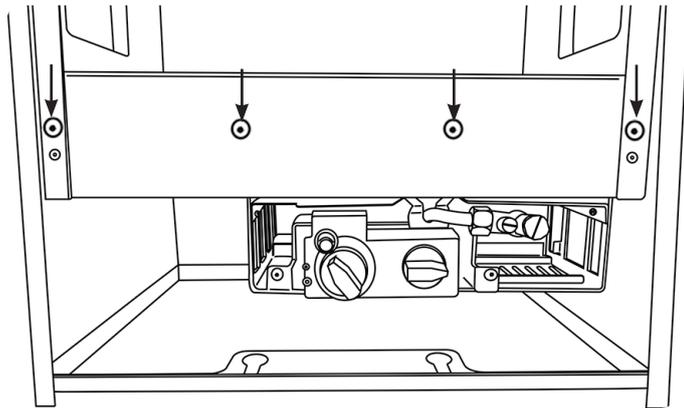



ALL MODELS


The frame can be removed by lifting the hooks clear of the slots from the bottom of the frame and lifting away from the appliance.

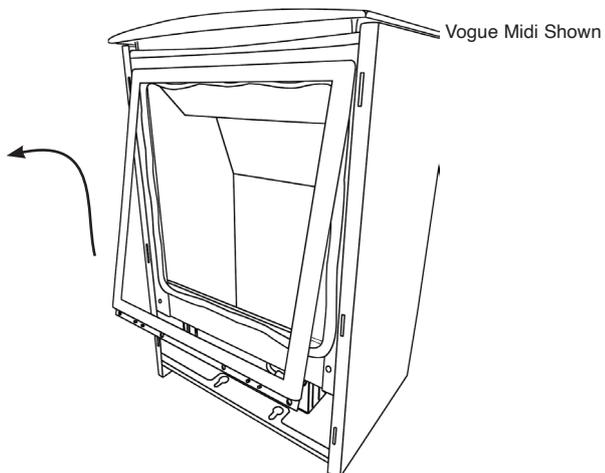

LOG LAYOUT

LOGS MUST BE POSITIONED ACCORDING TO THE FOLLOWING INSTRUCTIONS TO GIVE THE CORRECT FLAME EFFECT.

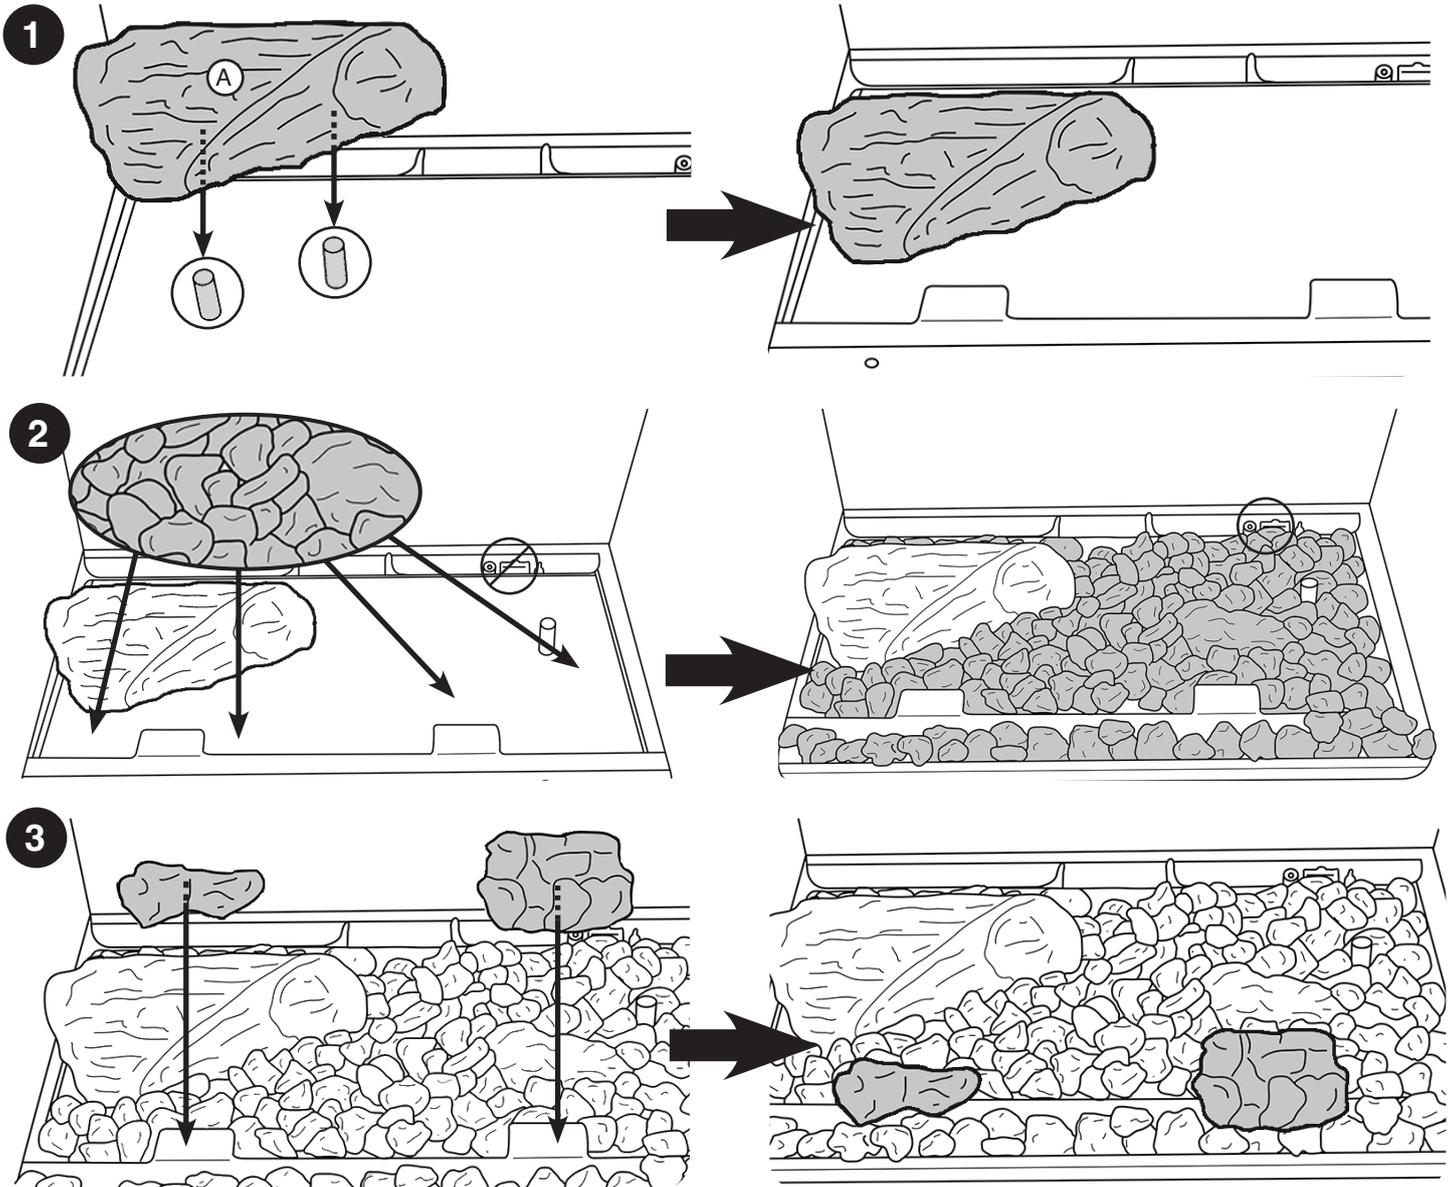
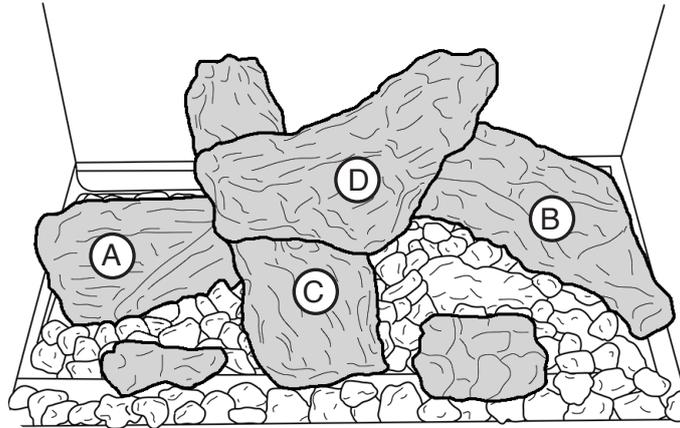


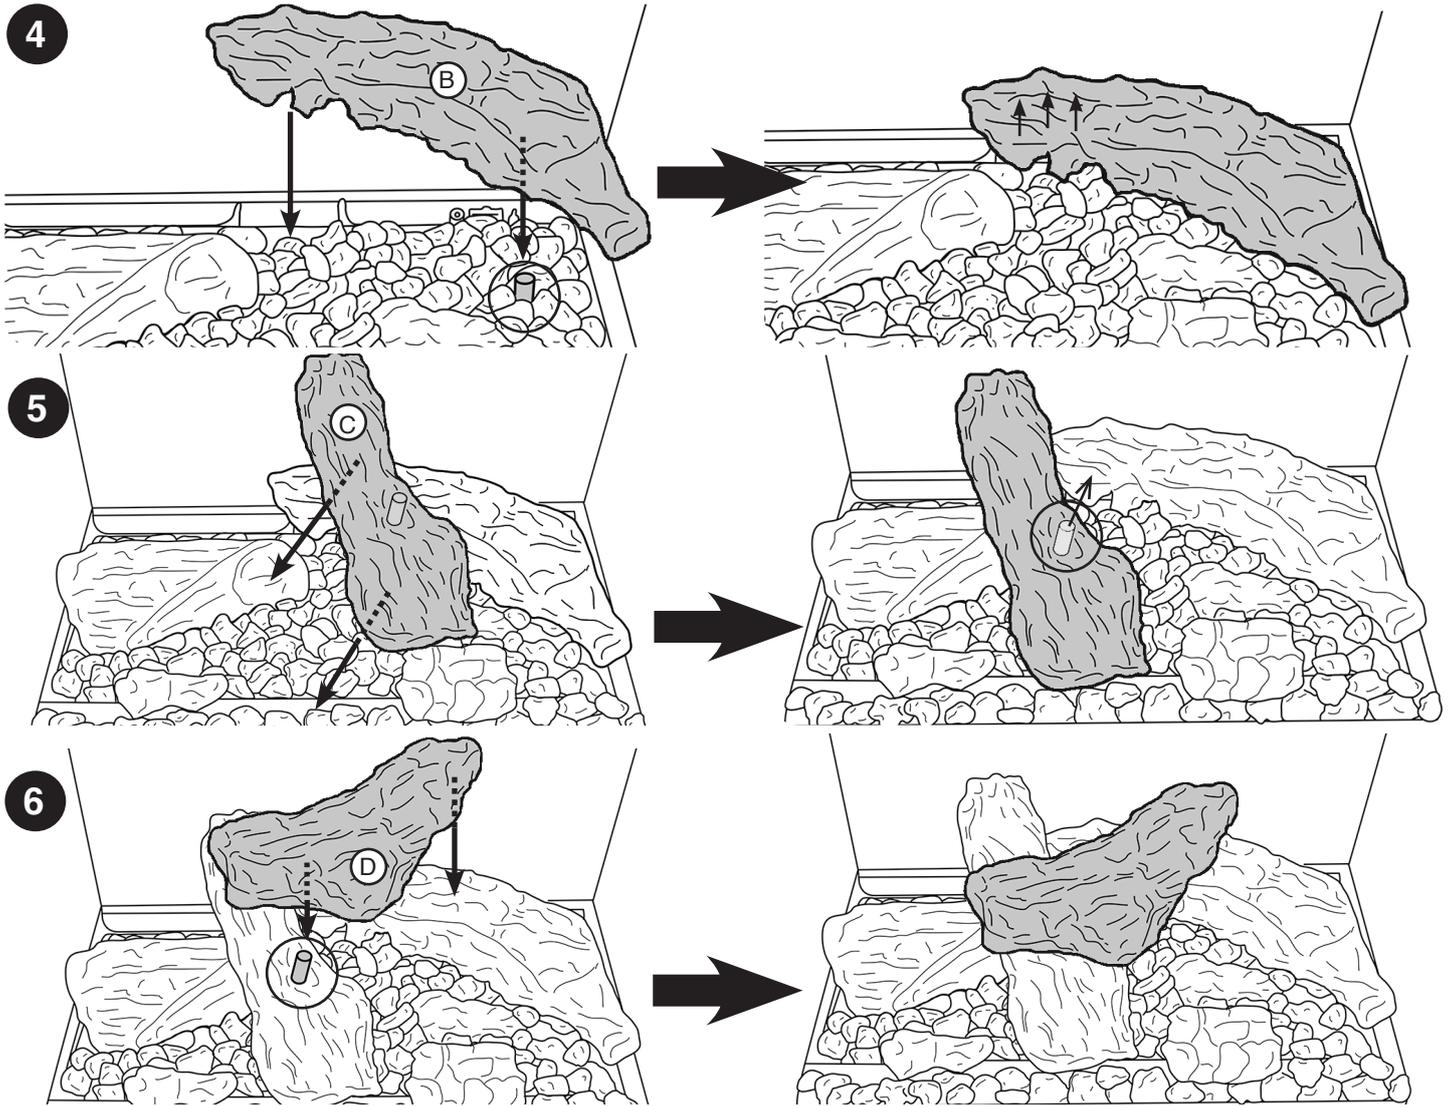

Embaglow

! IT MAY NOT BE NECESSARY TO USE ALL THE EMBAGLOW IN THIS PACK. SPARINGLY SPREAD AN AMOUNT OF THE FIBRES PROVIDED ON THE SECTIONS HIGHLIGHTED IN THE INSTRUCTIONS. Take care not to use more than specified in the instructions.

WARNING:
DO NOT PLACE NEAR THE PILOT AREA.
 Do not place Embaglow in the area around the pilot burner - see highlighted example on diagram as this may effect the ignition process and flame picture.

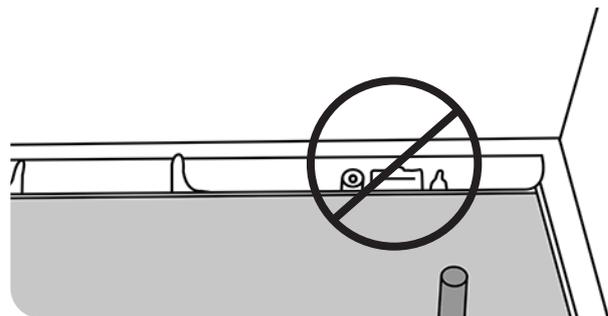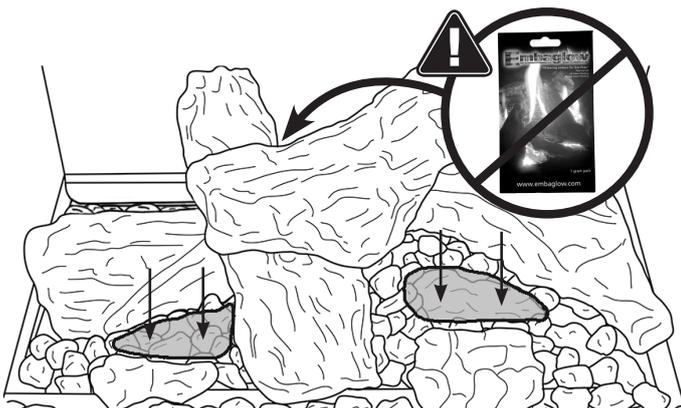


COMPLETION OF ASSEMBLY

ALL MODELS

To fit the window frame:


Offer the top of the frame to the opening and lower to engage hooks.

Replace ALL of the glass frame securing screws ensuring that a screw is present in all fixing slots.

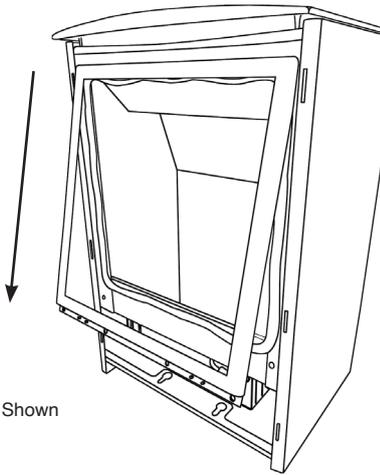

Vogue Midi Shown

VOGUE MIDI & MIDLINE


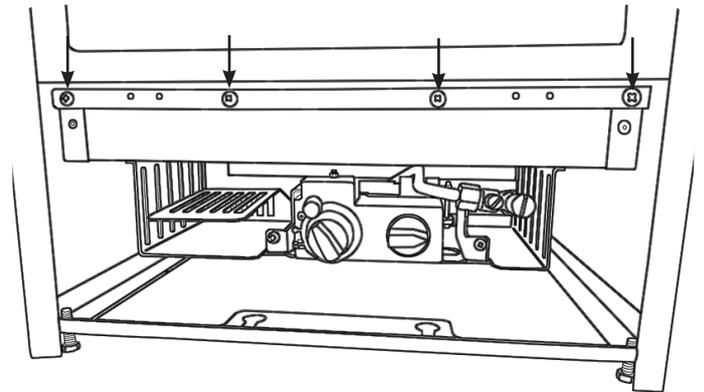


VOGUE MIDI, MIDLINE & HIGHLINE T 3 SIDED




UNDER NO CIRCUMSTANCES SHOULD THE APPLIANCE BE USED IF ANY OF THE GLASS FRAME RETAINING SCREWS ARE LOOSE OR MISSING.

Fit the front by inserting the hooks on the back of the frame into the slots on the front of the appliance.

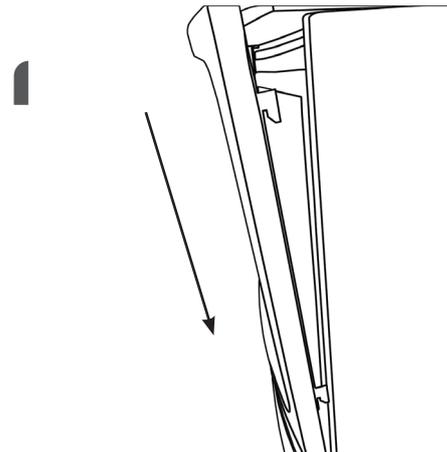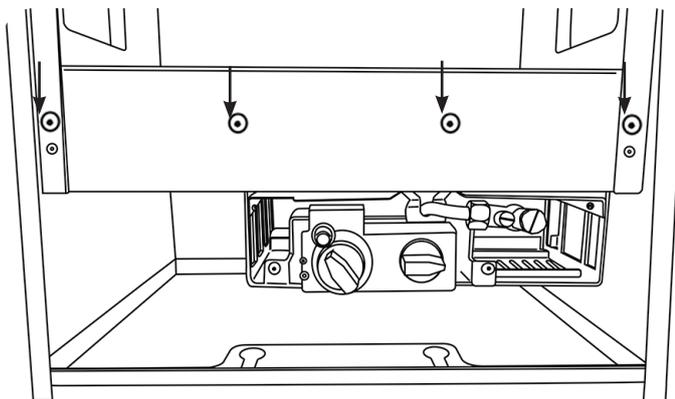


VOGUE MIDI

Fit the plinth by inserting the hooks on the back of the frame into the slots on the front of the appliance.

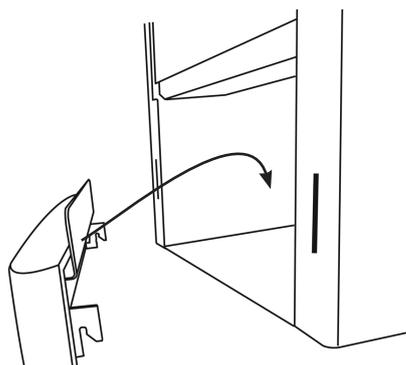

VOGUE MIDI MIDLINE & HIGHLINE MODELS

Push the lower door closed.

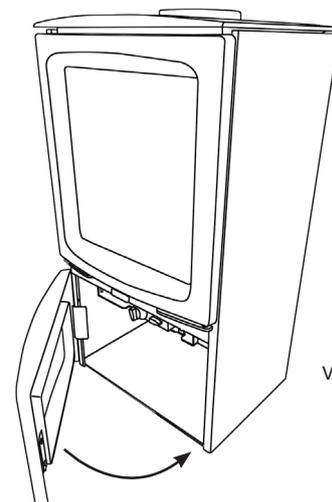

Vogue Midi Shown


OPERATING THE APPLIANCE

The method used to access the control valve differs between models.

VOGUE MIDI MODELS

The control valve is located behind the plinth.


Remove the plinth to access the controls by lifting the hooks clear of the slots on the front of the appliance.

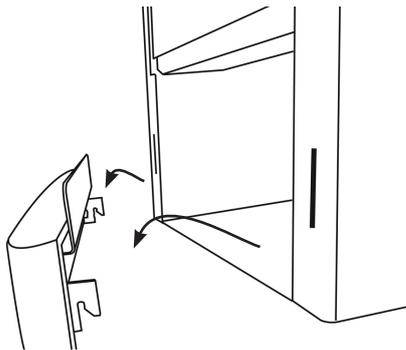

VOGUE MIDLINE & HIGHLINE T 3 SIDED

The control valve is located behind the lower door.


Pull the lower door open from the right hand side to access the controls.

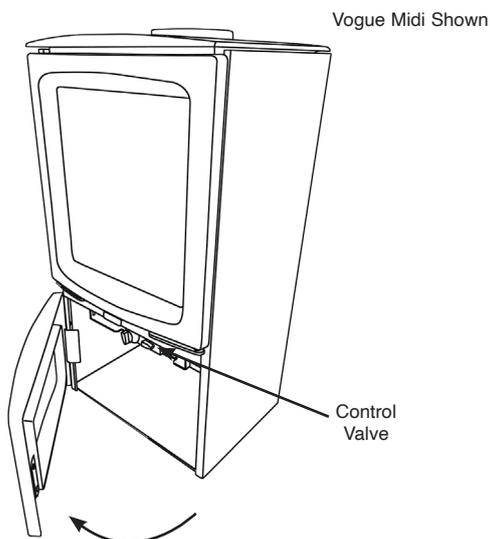

ALL MODELS

The valve has two controls.

1. The right-hand knob controls the pilot ignition.
2. The left-hand knob controls the main burner.

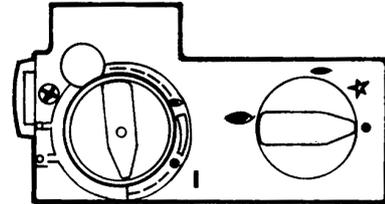

Refer to separate instructions if your appliance is upgraded to include battery remote control. The instructions below apply whether or not you have the remote upgrade.

Lighting the Pilot

To start the left-hand and right-hand control knobs must both point to off (●):

Press in the right-hand control knob and rotate anti-clockwise until a click is heard. Continue to press in. The knob points to the pilot (◄).

The pilot is lit.

Keep the knob depressed for 10 seconds before releasing. The pilot remains lit.

Repeat the above steps if the pilot does not stay lit.

NOTE: If the pilot goes out, the Interlock system prevents you lighting again for a short period.

If, after repeating the above steps the pilot does not light, contact your Retailer or Installer.

Turn the right-hand knob to the left to main burner setting (◄).

Adjusting the Flame height

You can now adjust the flame height and temperature using the left-hand control knob.

Turn the left-hand knob anti-clockwise to increase the flame height.

Turn clockwise to decrease the height.



IMPORTANT: YELLOW FLAMES TYPICALLY APPEAR WHEN THE APPLIANCE HAS REACHED NORMAL OPERATING TEMPERATURE. THIS CAN TAKE UP TO 30 MINUTES.



WARNING: IF THE APPLIANCE FAILS TO LIGHT OR BECOMES EXTINGUISHED IN USE, WAIT 3 MINUTES BEFORE ATTEMPTING TO RELIGHT.

COMMISSIONING THE APPLIANCE

Complete the Commissioning Checklist at the front of this manual covering:

- Thermocouple soundness checks.
This is to include ensuring the thermocouple is secure on the pilot bracket assembly, lead connection and integrity.
- Flue checks
- Gas checks
- Log/fuel effect layout - flame picture

Ensure all safety checks listed in the Commissioning Section are completed, paying particular attention to the glass panel checks and securing of the glass frame.

Upon completion of the commissioning and testing of the installation and correct operation of the appliance, the installer must instruct the user how to operate the appliance.

Guide the user through the User Instructions paying particular attention to:

- a) Regular servicing (page 12 of the User Instructions).
- b) Ventilation (page 12 of the User Instructions) - point out the ventilation positions where applicable.
- c) Hot surfaces (page 12 of the User Instructions).

SERVICING INSTRUCTIONS

SERVICING REQUIREMENTS



IMPORTANT – Check the glass panel on this appliance for any signs of damage on the glass panel (scratches, scores, cracks or other surface defects). If damage is observed, the glass panel must be replaced and the appliance must not be used until a replacement is installed.
DO NOT USE the appliance if any damage is observed.
 Isolate the appliance until a replacement has been obtained and installed. Purchase replacement glass panels from Gazco via the retailer from which the appliance was purchased or any other Gazco distributor.

This appliance must be serviced at least once a year by a competent person.


All tests must be carried out in accordance with the current Gas Safe recommendations.

BEFORE TESTING:

- Conduct a gas soundness test for the property ensuring there are no leaks before servicing.
- Check the operation of the appliance before testing.

SPECIAL CHECKS:

- Clean the burner using a vacuum cleaner with a soft brush attachment. Ensure all debris is removed from the burner ports.
- Clean away lint or fluff from the pilot.
- Clean away lint or fluff from under the burner.
- Check the spark gap on the pilot is correct.
- Ensure that the glass frame is secured correctly and that all retaining screws are in place.

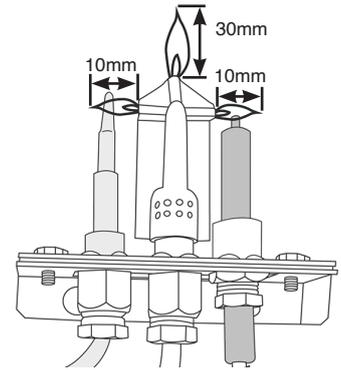


Correct any faults found during the initial test.

Re-commission the appliance in accordance with Commissioning Procedures.


Advise the customer of any remedial work undertaken.

IGNITION FUNCTIONAL CHECK 1

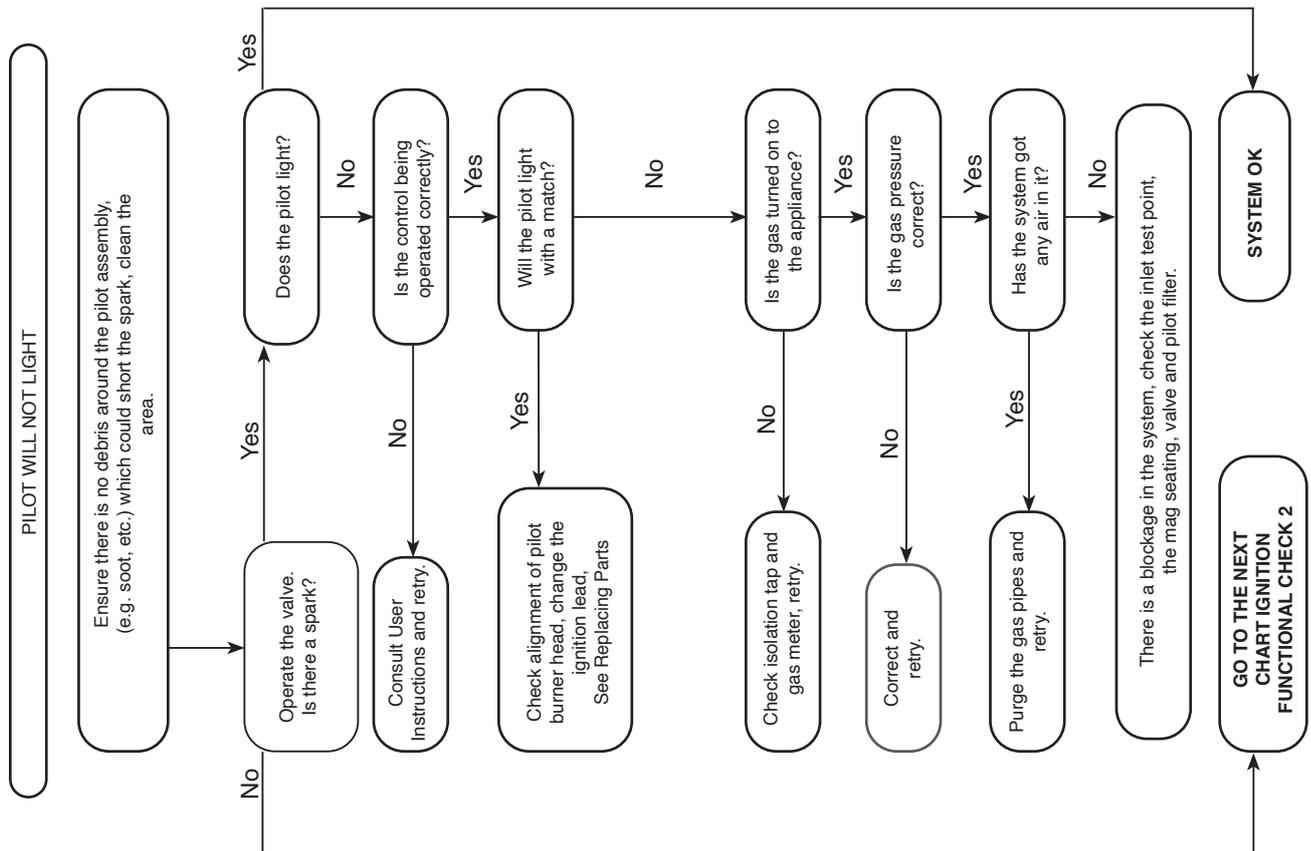


FAULT FINDING CHARTS

FLAME FAILURE FUNCTIONAL CHECK 3

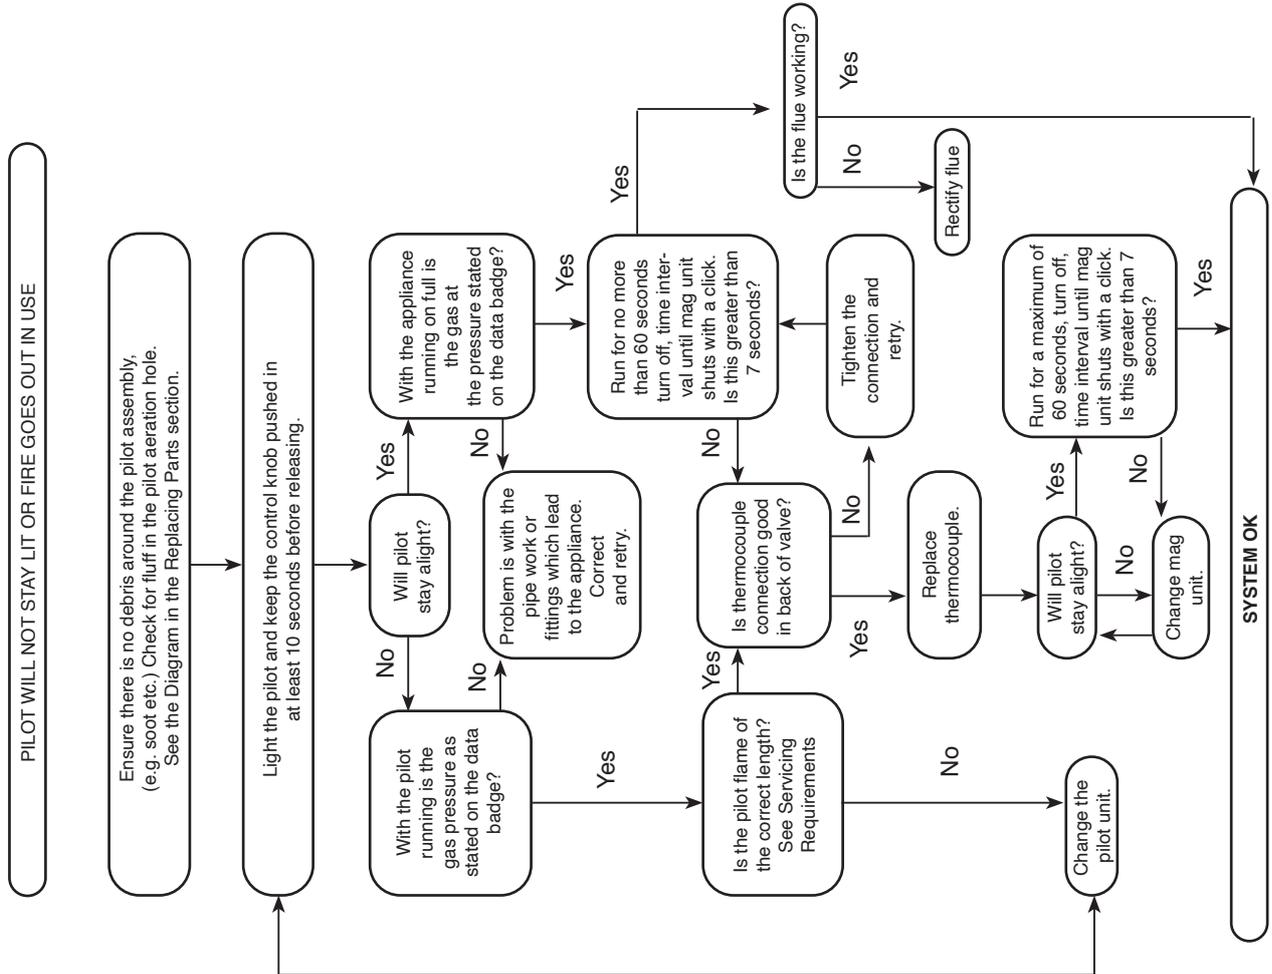

IGNITION FUNCTIONAL CHECK 2

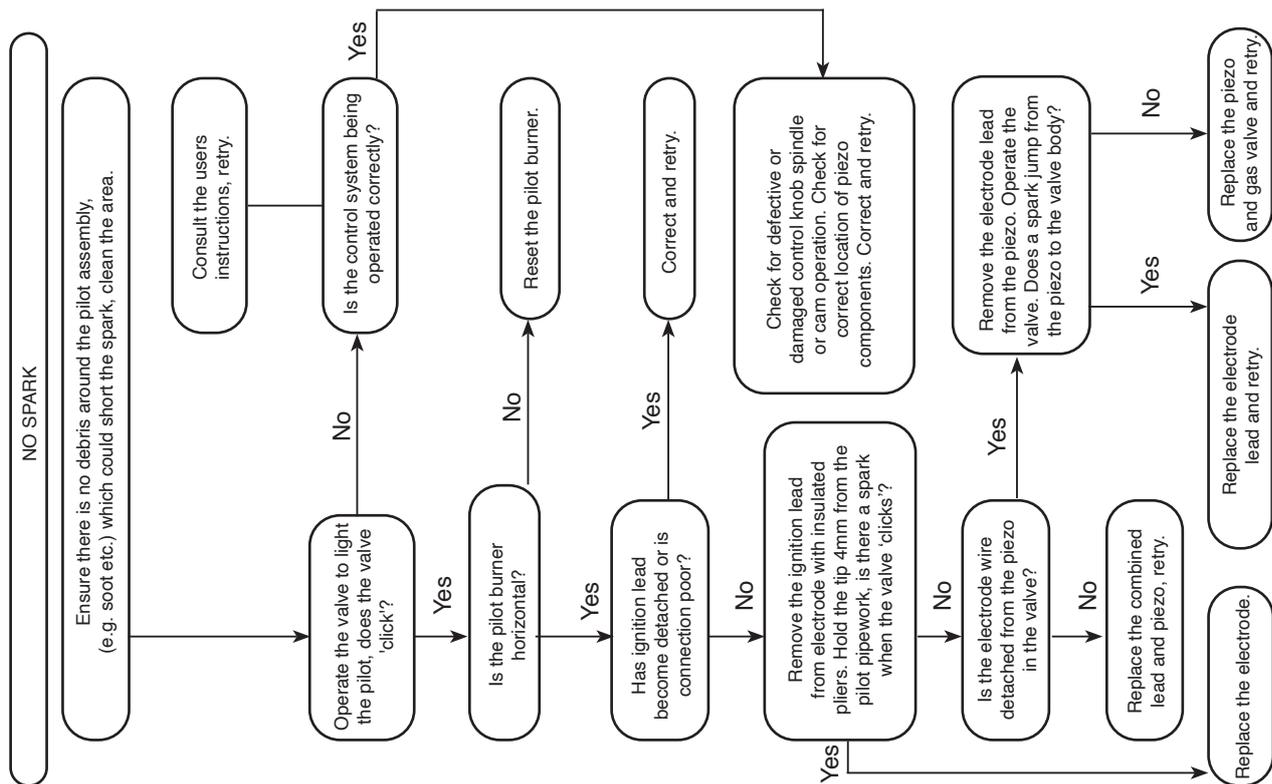

REPLACING PARTS

All main components can be replaced without removing the appliance from its installation.

IT IS ESSENTIAL THAT THE GAS SUPPLY TO THE APPLIANCE IS TURNED OFF AT THE ISOLATION DEVICE BEFORE PROCEEDING FURTHER.


DECORATIVE FRONT



IMPORTANT: THE OUTER PANELLING OF THE VOGUE IS MADE FROM CAST IRON. USE CAUTION WHEN INSTALLING, REMOVING AND STORING AS THE COMPONENTS ARE HEAVY AND SHOULD BE HANDLED CAREFULLY.


VOGUE MIDI MODELS

Remove the plinth to access the controls by lifting the hooks clear of the slots on the front of the appliance.

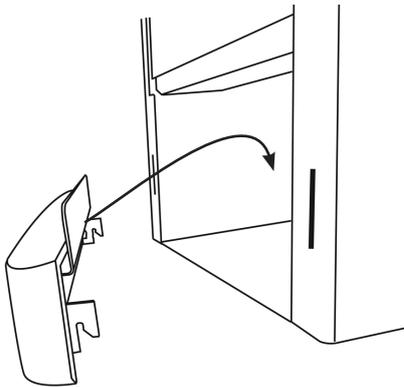


VOGUE MIDI MIDLINE MODELS

Pull the lower door open from the right hand side to access the controls.

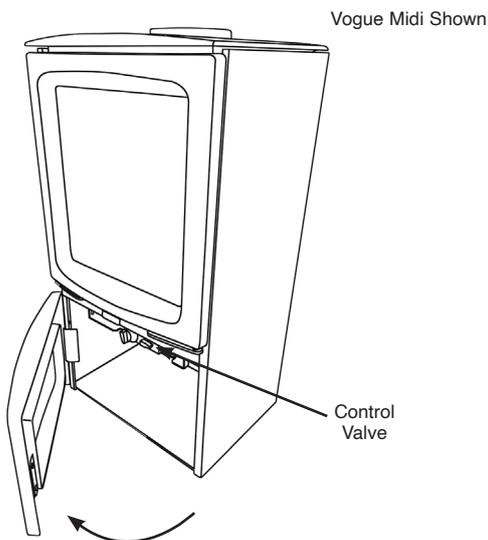

ALL MODELS


Remove the frame to gain complete access to the control valve and the viewing aperture by lifting the hooks clear of the slots on the front of the appliance.

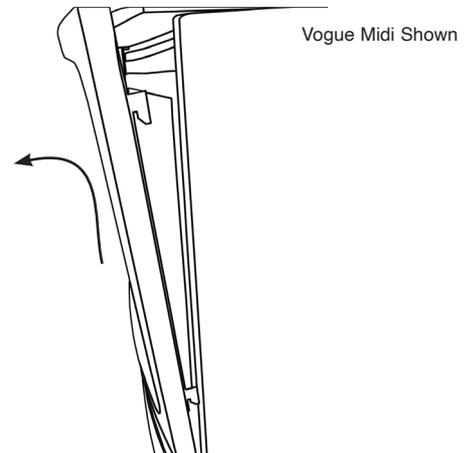


WINDOW FRAME ASSEMBLY

Using a screwdriver remove the 4 screws securing the window panel to the appliance. Take care to support the glass when removing the screws.


VOGUE MIDI & MIDLINE

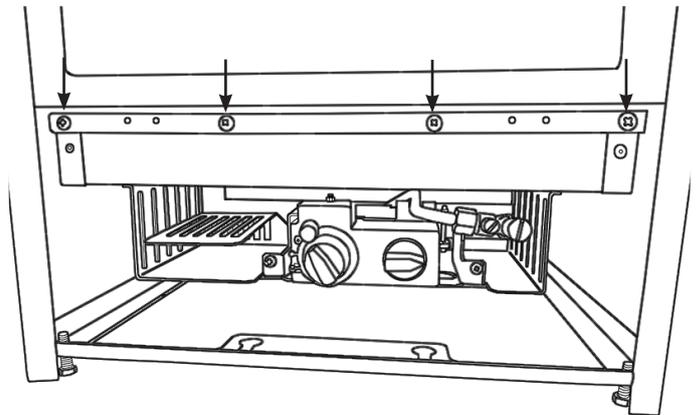

VOGUE MID, MIDLINE & HIGHLINE T 3 SIDED

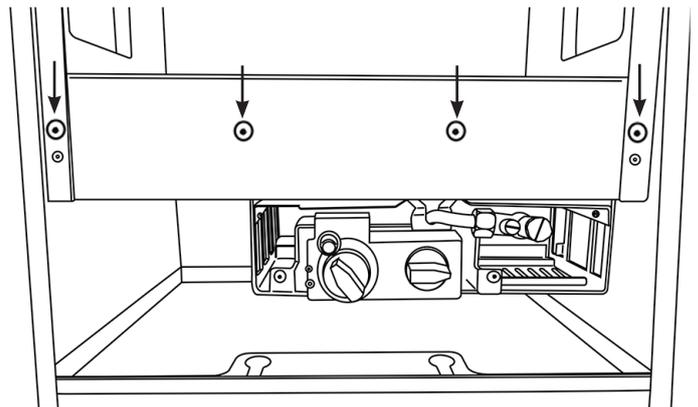

The frame can be removed by lifting the hooks clear of the slots from the bottom of the frame and lifting away from the appliance.

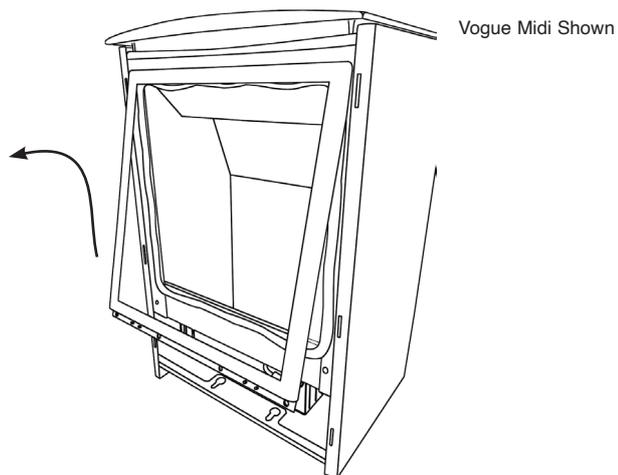

Place carefully to one side.

The glass frame must be refitted to the appliance following cleaning or servicing. Hold in position and secure with the screws.

Replace ALL of the securing screws ensuring that a screw is present in all fixing slots.




UNDER NO CIRCUMSTANCES SHOULD THE APPLIANCE BE USED IF ANY OF THE GLASS FRAME RETAINING SCREWS ARE LOOSE OR MISSING.


MAIN BURNER

To replace the main burner:

Remove the 2 securing screws at the front of the burner.

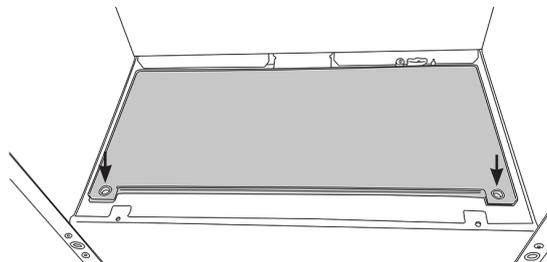


Lift the burner out of the firebox at an angle clear the brackets, exposing the service hatch.

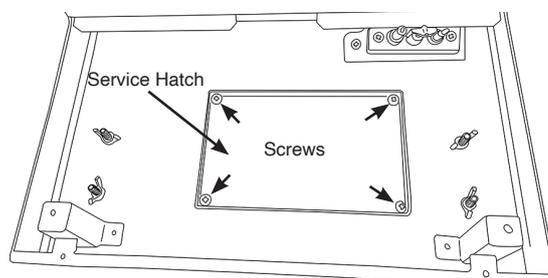

Refit in reverse order.

Important: Ensure the burner engages with the injector at the base of the firebox.

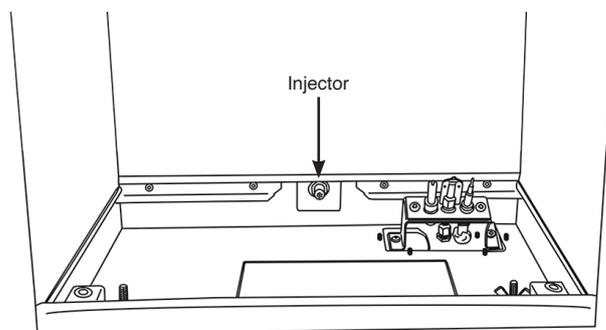

BAFFLE & LINERS


To access the burner tray and interior workings of the appliance it may be necessary to remove the baffle and the liners.

VOGUE MIDI & MIDI MIDLINE

BAFFLE

The baffle must be removed before the liners can be taken out of the appliance.

To do this undo the 4 screws securing it to the roof of the firebox.

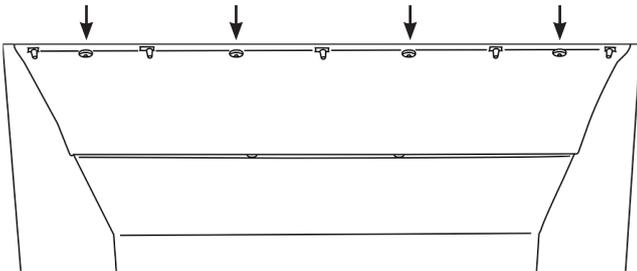

The baffle can now be removed through the front of the appliance.


BLACK GLASS LINERS

Once the baffle has been removed the liners can then be taken out.

To remove the side liners:


Tilt towards the centre of the firebox.

Lift up and pull out of position.

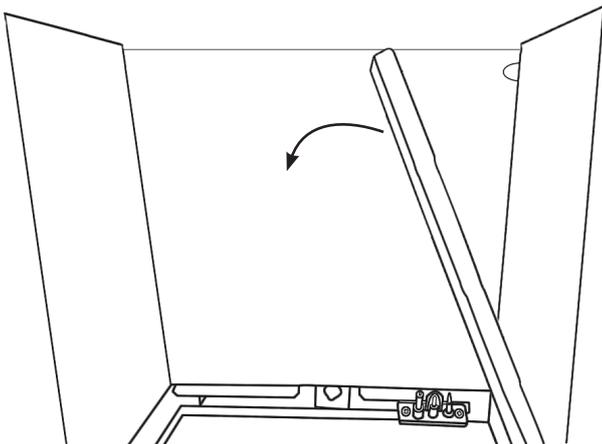


Support the rear panel when handling the last side and remove carefully.

Lean the top of the panel forward, lift and twist slightly to allow removal through the front of the appliance.

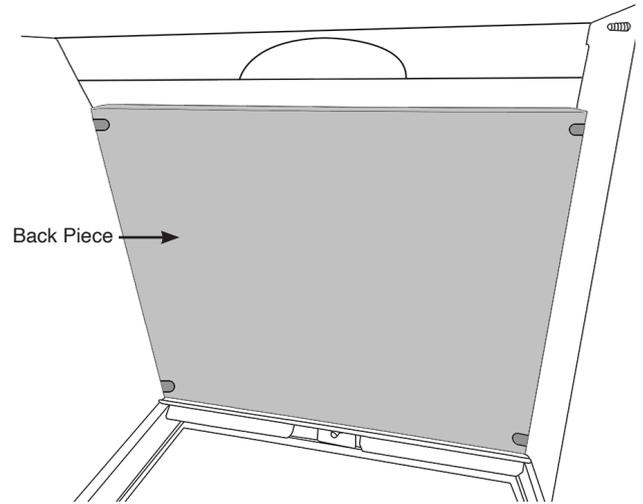

With the liners and baffle removed the firebox is clear for cleaning and maintenance.

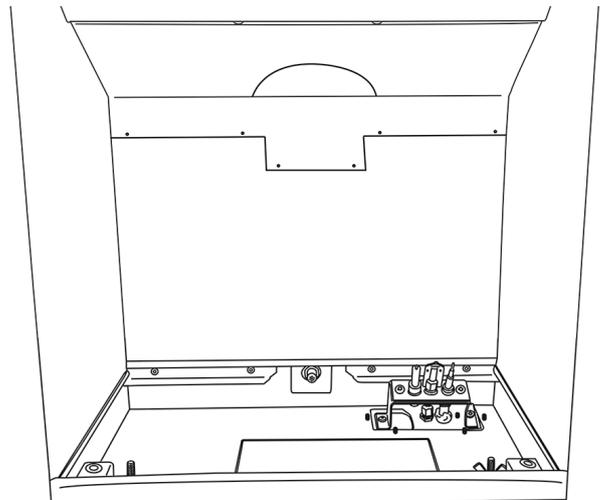


To replace the liners and baffle reverse these procedures.

VOGUE 3 SIDED MIDI & MIDLINE


BAFFLE

The baffle consists of two parts, the Main Baffle and the Rear Baffle.


To remove the Main baffle, undo the 3 screws, and manoeuvre through the firebox.

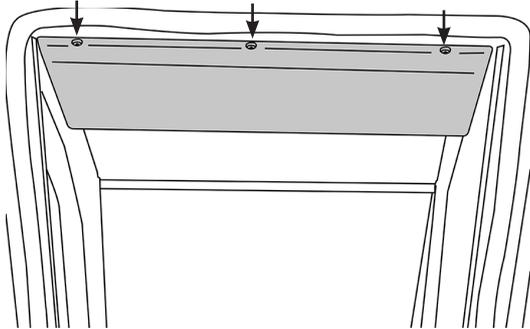


Note: when replacing the Main baffle ensure that the Main Baffle flap rests on the Rear Baffle.

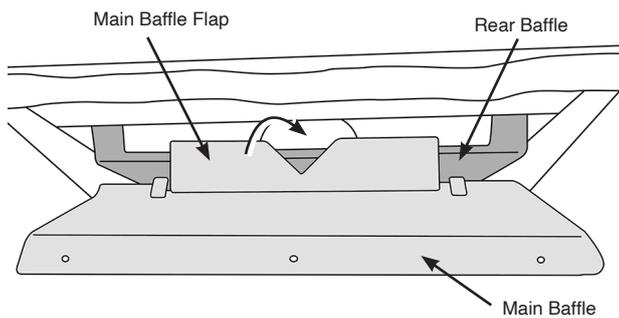

To remove the Rear baffle, undo the 2 screws.

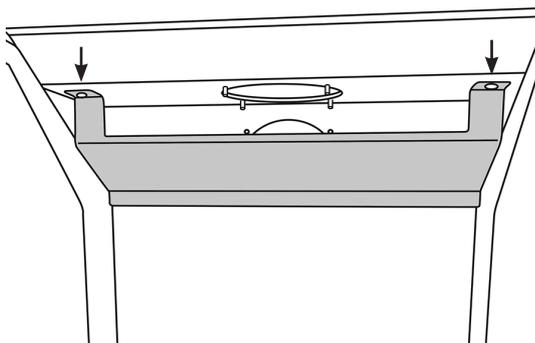


Note: When replacing the Rear Baffle ensure that the tab locates behind the rear panel slot.

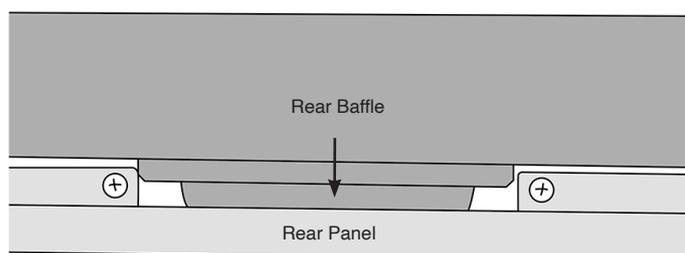


REAR PANEL & TRIMS

The rear panel is in one piece. Undo the 4 screws and lean forward to remove.

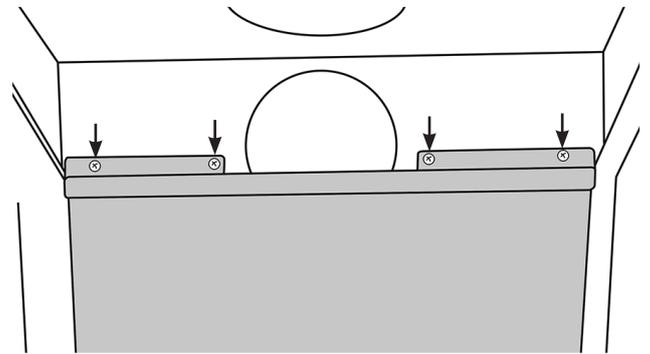

To make removal of the rear panel easier, it may be necessary to remove the burner tray.


To remove the fuel bed trim undo the 2 screws and slide out of the locating slot in the side trims, Detail A.

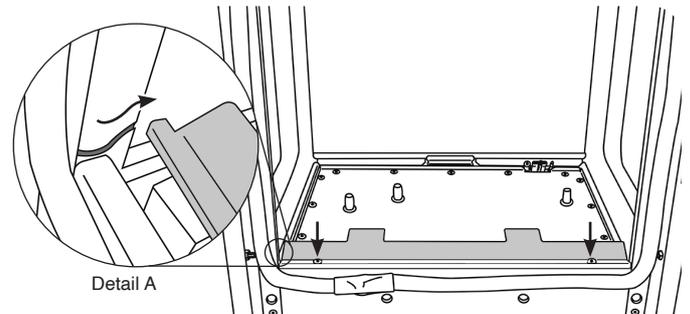

3 Sided Models Only:

To remove the side trim lift and hook off the firebox.

i NOTE: The Side Trims only need to be removed if damaged or the side glass needs replacing.

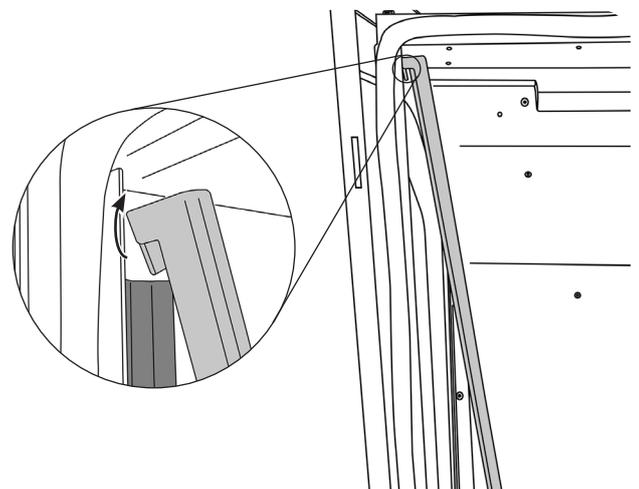

CONTROL ASSEMBLY & SERVICE HATCH


It is not necessary to remove the complete control assembly to service or replace parts of this appliance. The following sections will detail how to individually remove and replace each element.

The Vogue has a servicing hatch to allow access to the gas valve and control assembly in the base of the firebox.


Remove the 4 screws holding the service hatch.

Remove the panel.

This will allow access to the rear of the valve.

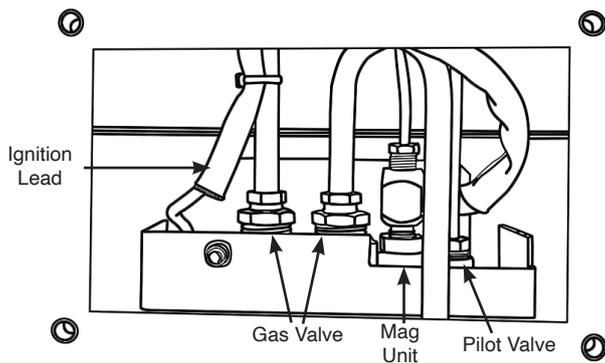


Reposition the service hatch and tighten the 4 screws.

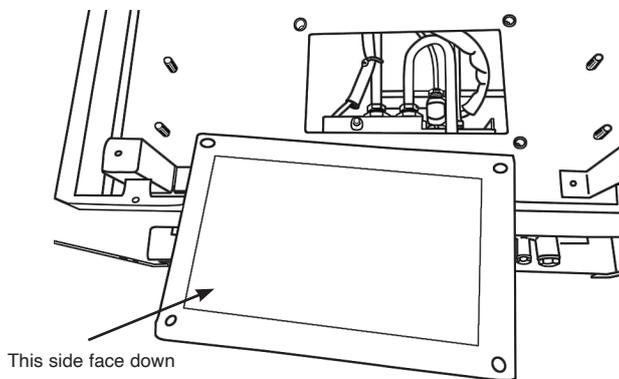

PILOT UNIT

The pilot assembly consists of 4 components which can be individually changed:

- A) Pilot burner bracket.
- B) Electrode.
- C) Pilot injector.
- D) Thermocouple.

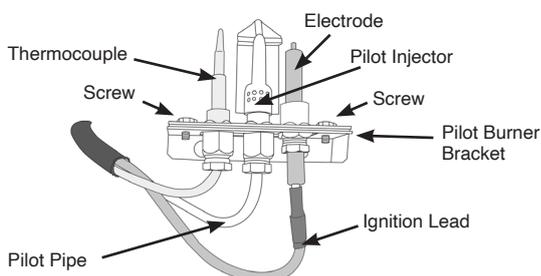

NOTE: Ensure the sealant surrounding the Electrode and Thermocouple leads is replaced if disturbed or removed whilst gaining access to these components.



IMPORTANT: UNDER THE TERMS OF THE EXTENDED WARRANTY IT WILL BE COMPULSORY TO CHANGE THE COMPLETE PILOT UNIT ON THIS APPLIANCE IN YEARS 2 AND 4.

Turn the gas supply off at the isolation device, remove the door and place to one side, carefully remove the ceramic fuel bed components.

PILOT BURNER BRACKET

To remove the Pilot Burner Bracket:

First remove the electrode, pilot pipe and thermocouple as described in the following sections.

Remove the 2 screws securing the bracket. The pilot burner bracket can now be removed.

Replace in reverse order.

ELECTRODE

Pull the ignition lead off the electrode and undo the retaining nut.

Replace with a new electrode. Do not over-tighten the nut; this could break the component.

Replace the ignition lead by pushing the spade connector onto the terminal (electrode).

PILOT INJECTOR

Undo the pilot pipe from the gas valve and from the underside of the pilot burner.

Remove the pipe and the injector drops out from the burner.

THERMOCOUPLE

Disconnect the thermocouple from the gas valve.

Undo the thermocouple nut in the back of the pilot bracket half a turn. This releases the thermocouple.

When replacing with a new thermocouple, take care to bend the new component to the same shape as the thermocouple just removed.

To refit the thermocouple into the pilot bracket, ensure it is pushed fully into the hole. There is a stop on the thermocouple to set the height.

Lock the retaining nut just enough to grip the thermocouple.

Connect the thermocouple to the valve **taking care not to over tighten.**



IGNITION LEAD

Follow the Pilot Unit instruction to access the back of the pilot assembly.

Disconnect the ignition lead from the electrode.

Remove the front cover from the control valve by removing the retaining screw and gently levering clear with flat bladed screwdriver.

NOTE: There is a small cylindrical metal spacer inside the cover, this must be kept and replaced on the fixing screw on re-assembly.

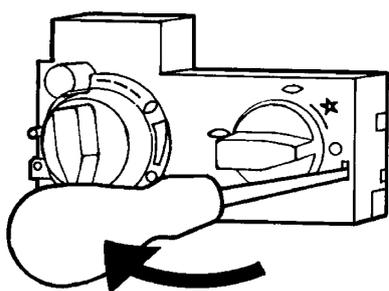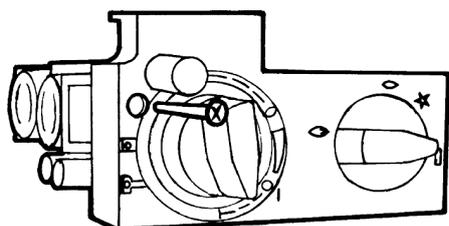

Disconnect the other end of the ignition lead from the valve body noting the route of the ignition lead.

Replace with a new ignition lead following the same route as the old one.

Replace the valve cover and the pilot assembly.

Check operation of the new ignition lead.

PIEZO

The piezo assembly used on this appliance is not serviceable and is not likely to fail.

If a new piezo is required it will be necessary to change the valve.

PRIMARY AERATION PLATE


NOTE: Not all models have aeration plates. Please refer to the Technical Specification.

To replace the primary aeration plate turn off the gas supply at the isolation device.

Remove the burner.

Undo the 2 nuts and remove the plate.

Replace with the correct size plate and secure the 2 nuts. Ensure that the lower edge of the plate is located over the venturi flange.

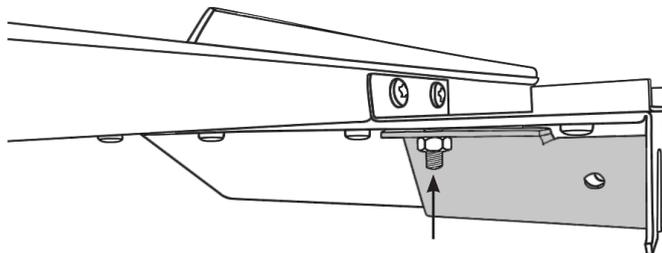


MAIN INJECTOR

To remove the main injector turn off the gas supply at the isolation device.

Remove the main burner.

Undo the compression nuts from the feed pipe and the gas valve under the appliance.

Working from inside the firebox remove the lock nut from the injector.

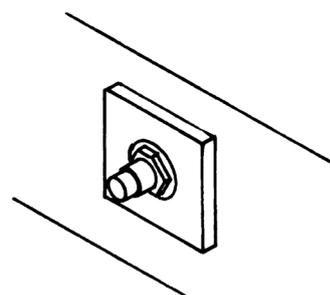

Extract the injector with the feed pipe from beneath the appliance.

Holding the injector with a spanner:

Undo the feed pipe. **Note the orientation of the Injector.**

Re-assemble in reverse order.

Turn on the gas supply and check for leaks.

GAS VALVE

To remove the valve turn off the gas supply at the isolation device.

Remove the main burner.

From inside the firebox remove the locknut from the injector.

Remove the pilot feed pipe from the pilot unit.


It is possible to remove the entire control assembly cradle by removing the four wing nuts inside the firebox.

- First undo the nuts on the injector pipe, thermocouple, and pilot unit.


- Now undo the 4 wing nuts. The cradle can now be withdrawn.

Alternatively it is possible to just remove the gas valve. Remove the 2 screws at the front of the valve bracket.

VOGUE MIDI & MIDLINE

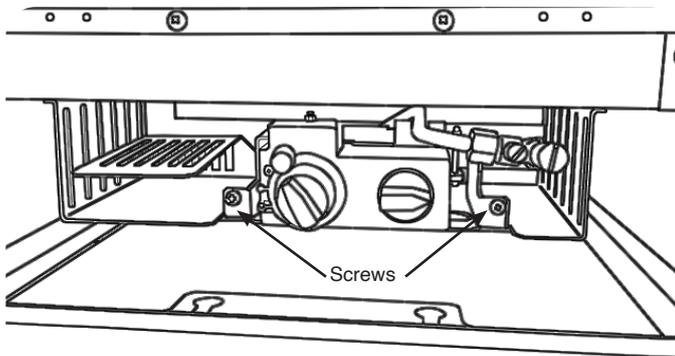


VOGUE MIDI & MIDLINE T 3 SIDED

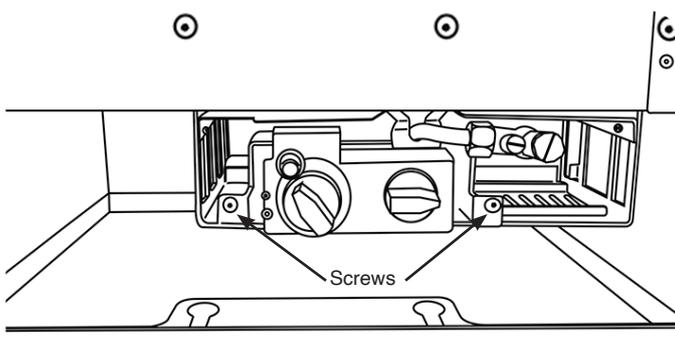

Slide the bracket slightly to the right and pull forward to access the valve connections.

Disconnect the 2 x 8mm and 1 x 4mm gas pipe fittings at the back of the gas valve, (A).

Disconnect the thermocouple, (B).

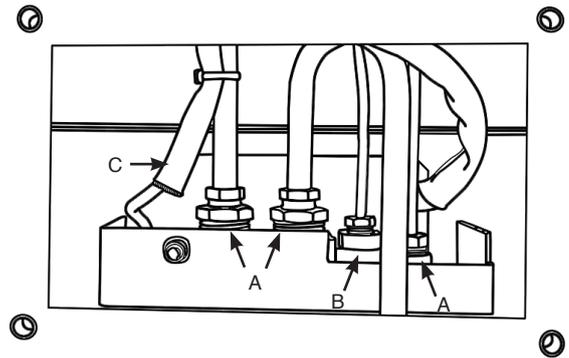

Disconnect the ignition lead from the gas valve, (C).

Remove the cover.

Undo the 2 screws securing the gas valve to the appliance and remove the valve.

Replace in reverse order.

Check all joints for gas leaks and check operation of the thermocouple and ignition lead.

MAGNETIC SAFETY VALVE


Turn the gas supply off at the isolation device.

Remove the gas valve.

Undo the magnetic valve-retaining nut from the back of the control valve.

Gently tap out the magnetic valve and replace with a new unit.

Replace the retaining nut and tighten.

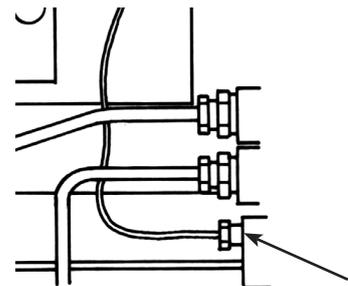


Reassemble the interrupter block and leads and secure the thermocouple connection in the rear of the gas control. (Do not overtighten).

Turn the gas supply on and check the entire pipework and valve joints for any leaks.


GLASS SIDE PANELS - 3 SIDED MODELS ONLY

To service the glass side panels, first remove the back panel and the side trims.

Undo the four screws securing the front bracket and remove.

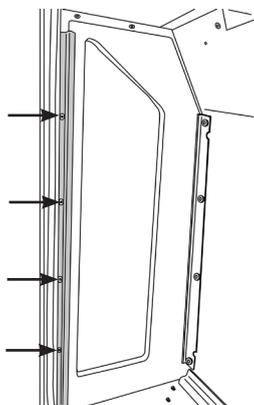

Undo the 4 screws securing the rear bracket and remove.

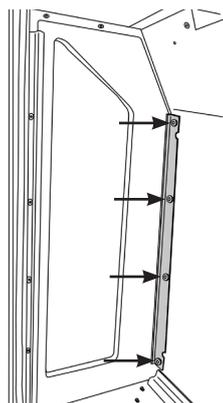

Replace the glass and gasket, ensuring that the printed side is facing outwards.

CONTROL UPGRADE

See Installation Instructions.

EXPLOSION RELIEF GASKET




IMPORTANT: If it is required to access the rear explosion relief for servicing the appliance must first be removed from the wall.

It is possible to change the gasket on the explosion relief panel.

Rear Explosion Relief

Remove the 6 screws on each spring panel and the 4 from the centre bracket.

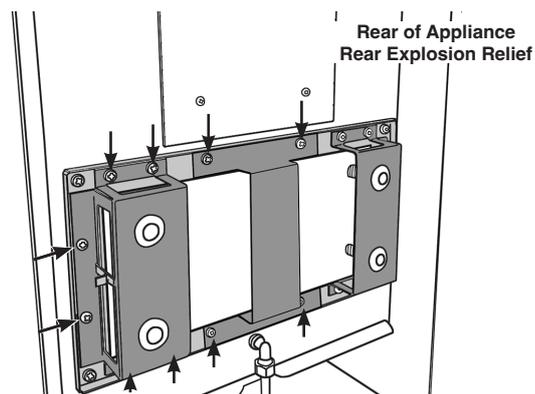


Remove the gasket and replace.

Ensure when replacing that the springs are located into the recess.

Refit in reverse order.

Lower Explosion Relief

Remove the 5 screws on each spring panel.

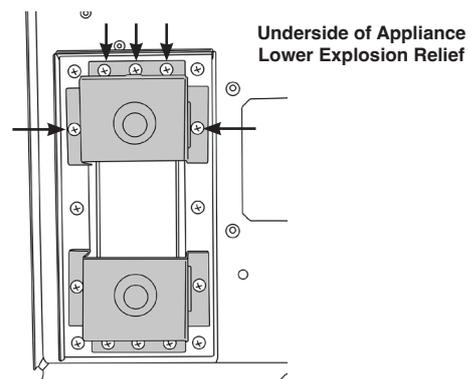


Remove the gasket and replace.

Ensure when replacing that the springs are located into the recess.

Refit in reverse order.

SPARES LIST

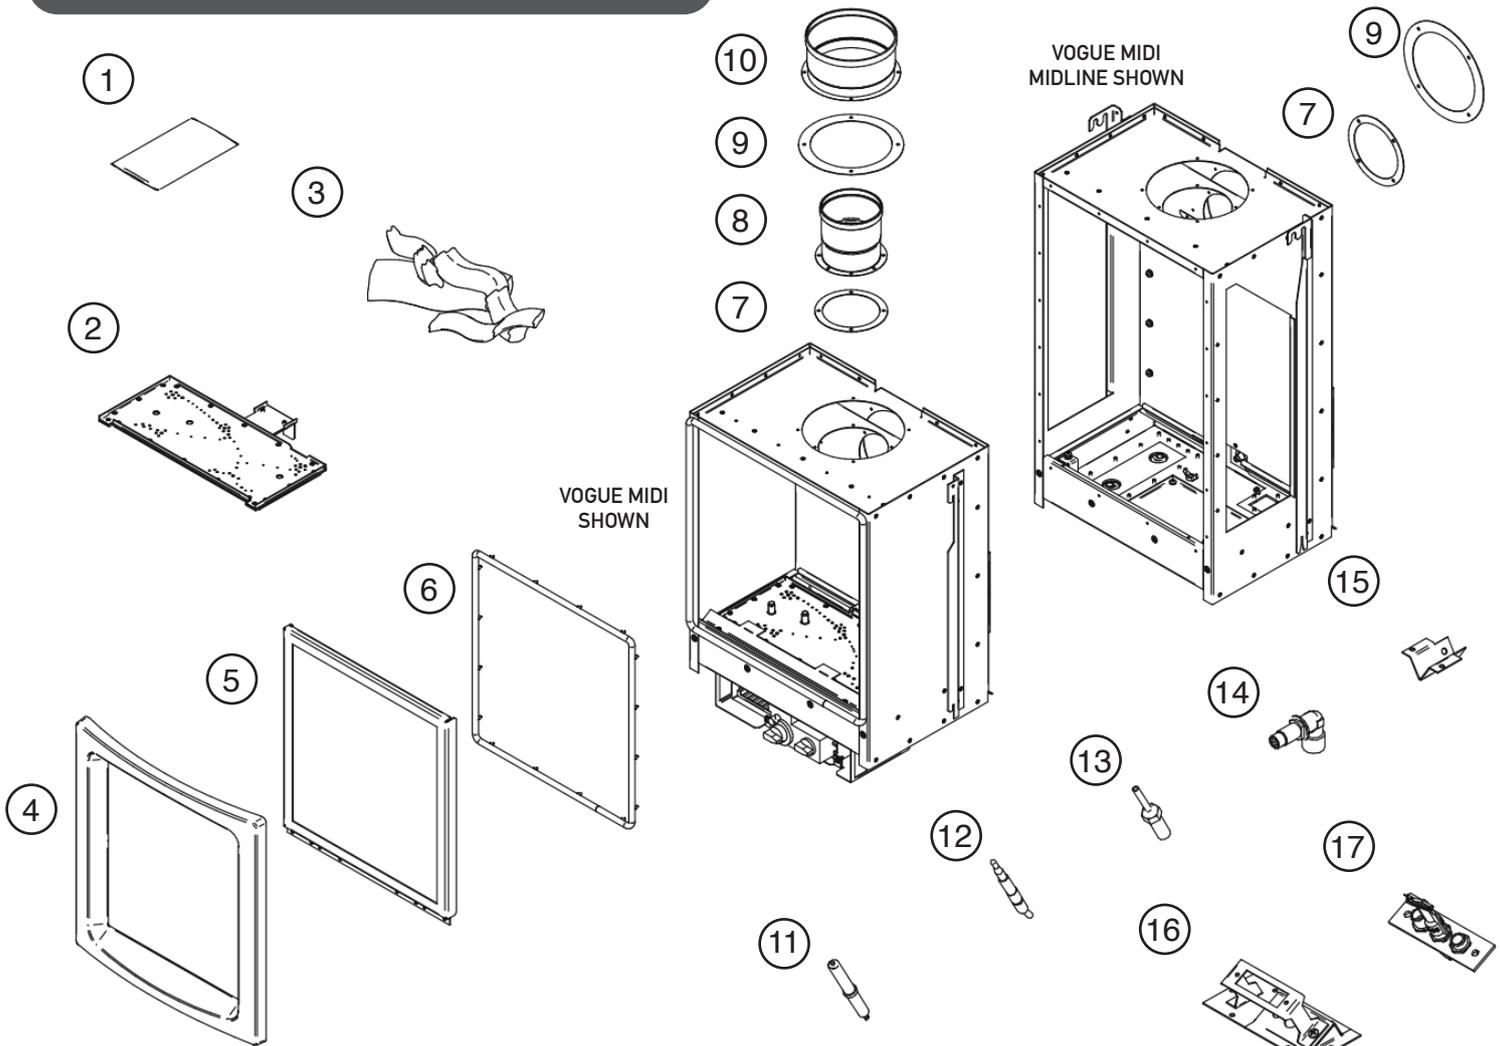


NO.	COMPONENT	VOGUE MIDI				QUANTITY
		MIDI / MIDLINE		T MIDLINE 3 SIDED, T 3 SIDED / T 3 SIDED WALL MOUNTED / T HIGHLINE 3 SIDED		
		NATURAL GAS	LPG	NATURAL GAS	LPG	
1	Embaglow	GZ8471				1
2	Burner	GZ13225	GZ14286	GZ14317	GZ14286	1
3	Log Set	CE1755				1
4	Cast Door	CA0828		CA0832		1
5	Glass frame assembly	GZ13410		GZ13513		1
6	Door Seal	FA0725		FA0726		1
7	Inner Spigot Gasket	CE0210				1
8	Inner Spigot	MEC0275				1
9	Outer Spigot Gasket	CE0211				1
10	Outer Spigot	MEC0232				1
11	Electrode	PI0075				1
12	Thermocouple	PI0074				1
13	Pilot Bulk Head	FA0723				1
14	Injector	IN0064	IN0062	IN0039	IN0062	1
15	Aeration Plate	GZ11271	-	GZ10407	-	1
16	Pilot Bracket Assembly	GZ13443				1
17	Pilot	PI0069	PI0070	PI0069	PI0070	1



Due to continual technical improvements please check online or with your Gazco retailer for the most up to date parts lists.

Only use Genuine Gazco spares when servicing your appliance. All of our essential spare parts and consumable items are available to purchase from our webshop at www.gazcospares.com.

SPARES LIST - CONTROL ASSEMBLY

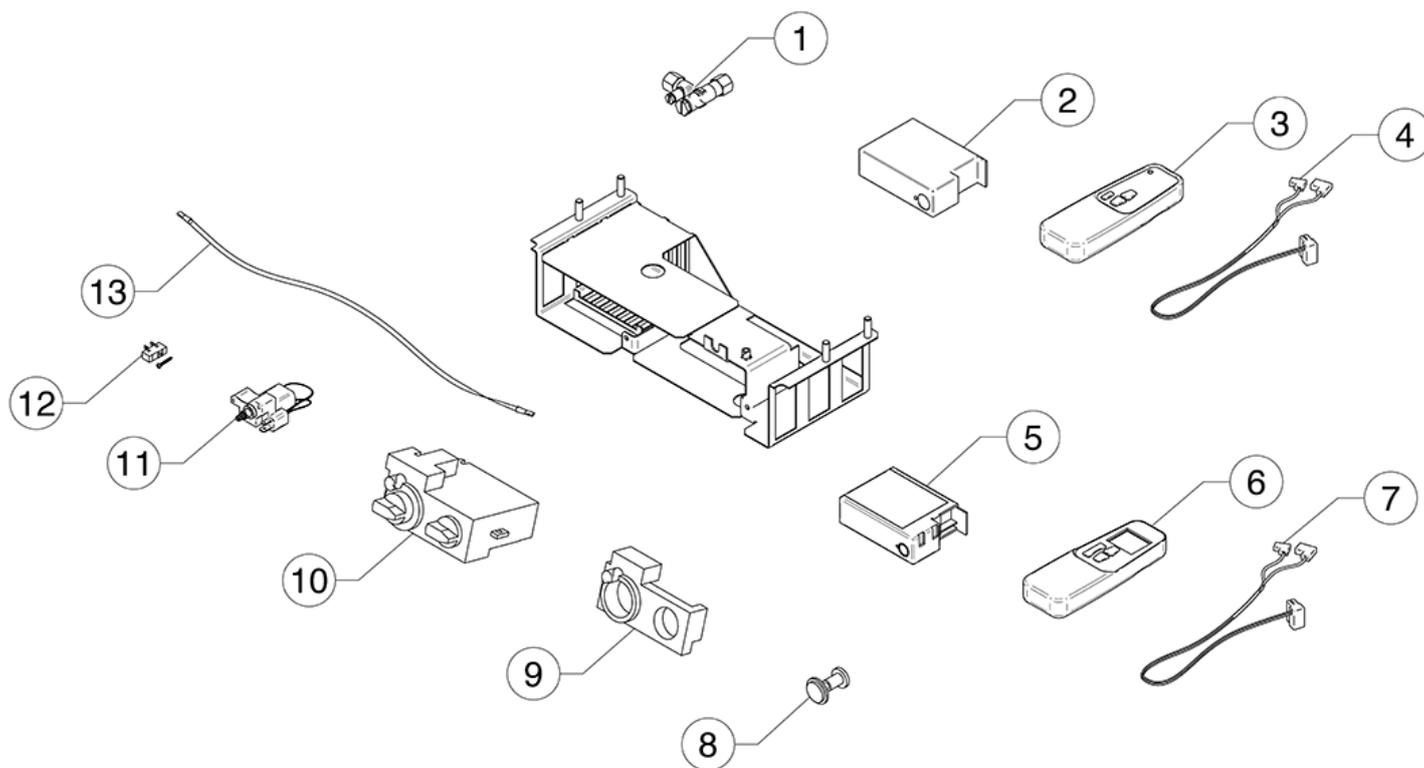

NO.	COMPONENT	PART CODE	QUANTITY
1	Inlet Isolation Valve	GC0095	1
2	Standard Receiver	EL0235	1
3	Standard Handset	EL0239	1
4	Standard Receiver Cable	EL0237	1
5	Thermostatic Receiver	EL0236	1
6	Thermostatic Handset	EL0240	1
7	Thermostatic Receiver Cable	EL0238	1
8	Mag Unit	GC0166	1
9	Control Valve Cover	GC0087	1
10	Control Valve	GC0088K	1
11	Geared Motor	EL0234	1
12	Micro Switch and Screw	EL0241	1
13	Ignition Lead	GC0090	1



Due to continual technical improvements please check online or with your Gazco retailer for the most up to date parts lists.

Only use Genuine Gazco spares when servicing your appliance.

All of our essential spare parts and consumable items are available to purchase from our webshop at www.gazcospares.com.

PRODUCT MATERIAL INFORMATION

The following substances, preparations or components should be disposed of or recovered separately from other WEEE in compliance with Article 4 of EU Council Directive 75/442/EEC.

METAL	STEEL	Can be taken to a local recycling centre for reuse to reduce waste going to landfill.
	CAST IRON	
GLASS		Can be taken to a local recycling centre for reuse to reduce waste going to landfill.
VERMICULITE LININGS		Non hazardous material. Vermiculite can be crushed up and used for plant bedding and ash used for composting or disposed of at a local recycling centre for reuse to reduce waste going to landfill.
ROPE SEALS/ COAL FUEL EFFECTS/ BRICK EFFECT, LEDGESTONE AND BLACK REED LINERS		If the product contains any of the following: Rope seals, Coal Fuel Effects, Black Reed Brick Effect or Ledgestone Linings panels these items are made from Refractory Ceramic Fibre (RCF), a material which is commonly used for this application. Protective clothing is not required when handling these articles, but it is recommended to follow normal hygiene rules of not smoking, eating or drinking in the work area and always wash hands before eating or drinking. When servicing the appliance it is recommended that the replaced items are not broken up, but are sealed within heavy duty polythene bags and labelled as RCF waste. RCF waste is classed as stable, non-reactive hazardous waste and may be disposed of at a licensed landfill site.
LOG FUEL EFFECTS		Log Fuel effects are not considered hazardous to health, but are non-recyclable and must be disposed of in accordance to the rules in force.
ELECTRICAL COMPONENTS	(FAN KITS ETC IF APPLICABLE)	Dispose of at a local recycling centre in accordance with the WEEE directive.

INFORMATION REQUIREMENT FOR GASEOUS FUEL LOCAL SPACE HEATER

MODEL		VOGUE MIDI					
		BF		MIDLINE BF		T 3 SIDED BF	
		NG	LPG	NG	LPG	NG	LPG
FUEL	Space Heating Emissions (NOx) - mg / kWh _{input} (GCV)	130	130	130	130	130	130

HEAT OUTPUT	Nominal Heat Output - P_{nom}	3.9kW	4.0kW	3.9kW	4.0kW	4.8kW	4.3kW
	Minimum Heat Output (indicative) - P_{min}	1.8kW	1.8kW	1.8kW	1.8kW	2.9kW	2.4kW

AUXILIARY ELECTRICITY CONSUMPTION	At Nominal Heat Output - e_{lmax}	N/A	N/A	N/A	N/A	N/A	N/A
	At Minimum Heat Output - e_{lmin}	N/A	N/A	N/A	N/A	N/A	N/A
	In Standby Mode - e_{lSB}	N/A	N/A	N/A	N/A	N/A	N/A

USEFUL EFFICIENCY	Useful Efficiency at nominal heat output - $\eta_{th,nom}$	90.6%	90.6%	90.6%	90.6%	94.3%	94.3%
	Useful Efficiency at minimum heat output (indicative) - $\eta_{th,min}$	80.2%	80.2%	80.2%	80.2%	91.5%	91.5%

PILOT FLAME POWER REQUIREMENT	Permanent Pilot Flame Power requirement (if applicable) - P_{pilot}	0.200kW	0.200kW	0.200kW	0.200kW	0.200kW	0.200kW
-------------------------------	---	---------	---------	---------	---------	---------	---------

TYPE OF HEAT OUTPUT/ROOM TEMPERATURE CONTROL

Electronic room temperature control + day timer	Yes	Yes	Yes	Yes	Yes	Yes
---	-----	-----	-----	-----	-----	-----

OTHER CONTROL OPTIONS (MULTIPLE SELECTIONS POSSIBLE)

Room temperature control, with presence detection	No	No	No	No	No	No
Room temperature control, with open window detection	No	No	No	No	No	No
With distance control option	No	No	No	No	No	No
With adaptive start control	No	No	No	No	No	No
With working time limitation	No	No	No	No	No	No
With black bulb sensor	No	No	No	No	No	No

ENERGY EFFICIENCY INDEX	84.0%	84.1%	84.0%	84.1%	88.2%	88.0%
ENERGY EFFICIENCY CLASS*	B	B	B	B	A	A

*When used with optional Thermostatic Control

Contact:	Gazco Limited, Spitfire Avenue, Skypark, Clyst Honiton, Exeter, Devon, England EX5 2FR
----------	--

INFORMATION REQUIREMENT FOR GASEOUS FUEL LOCAL SPACE HEATER

MODEL		VOGUE MIDI T					
		MIDLINE 3 SIDED BF		WALL MOUNTED 3 SIDED BF		HIGHLINE 3 SIDED BF	
		NG	LPG	NG	LPG	NG	LPG
FUEL	Space Heating Emissions (NOx) - mg / kWh _{input} (GCV)	130	130	130	130	130	130

HEAT OUTPUT	Nominal Heat Output - P_{nom}	4.8kW	4.3kW	4.8kW	4.3kW	4.8kW	4.3kW
	Minimum Heat Output (indicative) - P_{min}	2.9kW	2.4kW	2.9kW	2.4kW	2.9kW	2.4kW

AUXILIARY ELECTRICITY CONSUMPTION	At Nominal Heat Output - $e_{l_{max}}$	N/A	N/A	N/A	N/A	N/A	N/A
	At Minimum Heat Output - $e_{l_{min}}$	N/A	N/A	N/A	N/A	N/A	N/A
	In Standby Mode - $e_{l_{sb}}$	N/A	N/A	N/A	N/A	N/A	N/A

USEFUL EFFICIENCY	Useful Efficiency at nominal heat output - $\eta_{th,nom}$	94.3%	94.3%	94.3%	94.3%	94.3%	94.3%
	Useful Efficiency at minimum heat output (indicative) - $\eta_{th,min}$	91.5%	91.5%	91.5%	91.5%	91.5%	91.5%

PILOT FLAME POWER REQUIREMENT	Permanent Pilot Flame Power requirement (if applicable) - P_{pilot}	0.200kW	0.200kW	0.200kW	0.200kW	0.200kW	0.200kW
-------------------------------	---	---------	---------	---------	---------	---------	---------

TYPE OF HEAT OUTPUT/ROOM TEMPERATURE CONTROL

Electronic room temperature control + day timer	Yes	Yes	Yes	Yes	Yes	Yes
---	-----	-----	-----	-----	-----	-----

OTHER CONTROL OPTIONS (MULTIPLE SELECTIONS POSSIBLE)

Room temperature control, with presence detection	No	No	No	No	No	No
Room temperature control, with open window detection	No	No	No	No	No	No
With distance control option	No	No	No	No	No	No
With adaptive start control	No	No	No	No	No	No
With working time limitation	No	No	No	No	No	No
With black bulb sensor	No	No	No	No	No	No

ENERGY EFFICIENCY INDEX	88.2%	88.0%	88.2%	88.0%	88.2%	88.0%
ENERGY EFFICIENCY CLASS*	A	A	A	A	A	A

*When used with optional Thermostatic Control

Contact:	Gazco Limited, Spitfire Avenue, Skypark, Clyst Honiton, Exeter, Devon, England EX5 2FR
----------	--

SERVICE RECORDS

1ST SERVICE

Date of Service.....
 Next Service Due
 Signed
 Retailer's Stamp/GasSafe Registration Number

3RD SERVICE

Date of Service.....
 Next Service Due
 Signed
 Retailer's Stamp/GasSafe Registration Number

5TH SERVICE

Date of Service.....
 Next Service Due
 Signed
 Retailer's Stamp/GasSafe Registration Number

7TH SERVICE

Date of Service.....
 Next Service Due
 Signed
 Retailer's Stamp/GasSafe Registration Number

9TH SERVICE

Date of Service.....
 Next Service Due
 Signed
 Retailer's Stamp/GasSafe Registration Number

2ND SERVICE

Date of Service.....
 Next Service Due
 Signed
 Retailer's Stamp/GasSafe Registration Number

4TH SERVICE

Date of Service.....
 Next Service Due
 Signed
 Retailer's Stamp/GasSafe Registration Number

6TH SERVICE

Date of Service.....
 Next Service Due
 Signed
 Retailer's Stamp/GasSafe Registration Number

8TH SERVICE

Date of Service.....
 Next Due
 Signed
 Retailer's Stamp/Gas Safe Registration Number

10TH SERVICE

Date of Service.....
 Next Service Due
 Signed
 Retailer's Stamp/GasSafe Registration Number

FOR ENQUIRIES IN THE U.K (EXCLUDING NI):

Gazco Limited, Spitfire Avenue, Skypark, Clyst Honiton, Exeter, Devon, England EX5 2FR

Tel: (01392) 474011 Fax: (01392) 219932 E-mail: info@gazco.com www.gazco.com

FOR ENQUIRIES IN EUROPE (INCLUDING NI):

Stovax Heating Group Ltd, 40 Linenhall Street, Belfast, BT2 8BA

DX 400 NR Belfast Tel: +44 (0)1392 261990 E-mail: northernireland@gazco.com



PR2246